



# SV660N Series Servo Drive Hardware Guide











 $\rangle\rangle\rangle$ Data code 19011432C01

## Preface

### Introduction

The SV660N series high performance AC servo drive provides a power range from 0.05 kW to 7.5 kW. It supports EtherCAT communication protocol and carries Ethernet communication interfaces to work with the host controller for a networked operation of multiple servo drives.

The SV660N series servo drive supports stiffness level setting, inertia auto-tuning and vibration suppression to simplify the operation process. It allows a quiet and stable operation together with an MS1 series high-response servo motor with low or medium inertia and a 23-bit single-turn or multi-turn absolute encoder.

The drive aims to implement fast and accurate control in automation equipment such as semi-conductor manufacturing equipment, chip mounters, PCB punching machines, handling machineries, food processing machineries, machine tools, and transmission machineries.

This guide describes installation and wiring of the drive, including preparations before installation, unpacking and transportation, mechanical installation, and electrical installation.

Name	Data code	Description
SV660N Series Servo Drive Hardware Guide	19011360	This guide describes the installation and wiring of the drive, including pre-installation preparations, unpacking and transportation,mechanical installation, and electrical installation.
SV660N Series Servo Drive Selection Guide	19011354	Presents technical data and dimensions of the servo drive, and specifications and models of optional parts (installation accessories, cables, and periphery electrical parts).
SV660N Series Servo Drive Commissioning Guide	19011362	Presents servo commissioning, parameter descriptions, including the operating panel, commissioning software, commissioning procedure and a parameter list.
SV660N Series Servo Drive Function Guide	19011361	Presents functions and parameters, including function overview, basic servo functions, adjustment and parameter list.
SV660N Series Servo Drive Communication Guide	19011395	Presents functions and parameters of the servo drive, including EtherCAT communication configuration, parameter description, and communication application cases.

### **More Documents**

Name	Data code	Description
SV660N Series Servo Drive Troubleshooting Guide	19011847	Introduces faults and fault levels, the troubleshooting process, warning codes and fault codes.
SV660N Series Servo Drive Safety Guide	19011846	Presents the safety function and related certifications and standards, wiring, commissioning process, troubleshooting, and functions.
SV660N Series Servo Drive Manual Package	PS00005512	Provides information on selection, installation, commissioning, function, troubleshooting and parameters of the equipment.

### **Revision History**

Date	Version	Description
December 2023	C01	<ul> <li>Updated document acquisition channels.</li> <li>Added descriptions for single-phase 220 V power supply.</li> <li>Updated main circuit terminal cable specifications.</li> <li>Updated main circuit terminal cable specifications.</li> <li>Added the mounting instructions for the shield bracket.</li> <li>Updated CN5 terminal layout.</li> <li>Added DI logic level standard for DI/DO signals.</li> </ul>
April 2023	C00	<ul> <li>Updated the product image on the front cover.</li> <li>SIZE E does not support zero-distance installation anymore.</li> </ul>
January 2023	B02	Modified information on recommended control terminal cable specifications.
November 2022	B01	<ul> <li>Added warranty information in the preface.</li> <li>Added information on recommended control terminal cable specifications.</li> <li>Added new content in wiring precautions: After all cables are connected, it is recommended to tie them at the point 10cm–20cm away from the connector end.</li> </ul>
August 2022	B00	<ul> <li>Added information on recommended main circuit cables.</li> <li>Modified the storage temperature range.</li> <li>Adjusted the manual structure.</li> </ul>
January 2022	A04	<ul> <li>Replaced the safety instructions</li> <li>Added the table "Cable specifications and recommended models" to section 3.4.2; deleted information on the PE conductor.</li> <li>Modified grounding instructions of a single device in section 3.4.6.</li> <li>Modified the table "Recommended cable sizes" in section 3.6.3.</li> </ul>

Date	Version	Description
October 2021	A03	<ul> <li>Optimized sections Safety Instructions, Cable Models, Cable Specifications and Recommended Models, and Wiring and Setup of the Regenerative Resistor.</li> <li>Added information on unpacking weight and fan installation in section Installation.</li> <li>Added a section: Precautions for Wiring Encoder Signal Cables.</li> <li>Deleted the information on braking resistance selection process in section Wiring and Setup of the Regenerative Resistor.</li> <li>Minor corrections.</li> </ul>
March 2020	A02	Modified the information on the pin layout of the power cable connector at the lead wire-type motor side.
February 2020	A01	Minor corrections.
October 2020	A00	First release

### Access to the guide

This guide is not delivered with the product. You can obtain the PDF version in the following ways:

- http://www.inovance.com.
- Scan the QR code on the equipment to acquire more.
- Scan the QR code below to install the app, where you can search for and download manuals.



#### Warranty agreement

Inovance provides warranty service within the warranty period (as specified in your order) for faults or damage that occur during normal operation. Maintenance will be charged after the warranty period expires.

Within the warranty period, maintenance will be charged for the following damage:

- Damage caused by operations not following the instructions in the user guide
- Damage caused by fire, flood, or abnormal voltage
- Damage caused by unintended use of the product
- Damage caused by use beyond the specified scope of application of the product

• Damage or secondary damage caused by force majeure (natural disaster, earthquake, and lightning strike)

The maintenance fee is charged according to the latest Price List of Inovance. If otherwise agreed upon, the terms and conditions in the agreement shall prevail. For details, see Product Warranty Card.

# Table of Contents

Preface	1
Fundamental Safety Instructions	7
1 Installation	4
1.1 Installing the Servo Drive       1         1.1.1 Unpacking and Handling       1         1.1.2 Installation Environment       1         1.1.3 Installation Clearance       1         1.1.4 Installation Dimensions       2         1.1.5 Installation Precautions       2         1.1.6 Installation Guide       2	4 6 7 0 2
1.2 Installing the Options       2         1.2.1 Instructions for Installing the Fuse and Circuit Breaker.       2         1.2.2 Instructions for Installing the AC Input Reactor       2         1.2.3 Instructions for Installing the EMC Filter       2         1.2.4 Installation of the Magnetic Ring and Ferrite Clamp       2	5 5 6
1.2.5 屏蔽支架的安装说明	7
2 System Wiring Diagram	
2.1 System Wiring Diagram	
2.2 System Structure	
3 Introduction to Wiring Terminals	2
3.1 Wiring Precautions	2
3.2 Terminal Pin Layout of the Servo Drive	4
3.3 Introduction to Main Circuit Terminals.33.3.1 Wiring Precautions33.3.2 Main Circuit Wiring Requirements43.3.3 Recommended Cable Specifications and Models43.3.4 Main Circuit Terminal Layout43.3.5 Connecting the Motor (UVW)53.3.6 Wiring of External EMC Filter53.3.7 Wiring of the Power Supply53.3.8 Grounding and Wiring5	8 0 1 7 2 5 6
3.4 Control Terminal (CN1).       6         3.4.1 Terminal Layout       6         3.4.2 DI/DO Signals       6         3.4.3 Wiring of the Brake       7	5 7
3.5 Encoder Terminal (CN2)       7         3.5.1 Terminal Layout       7         3.5.2 Connecting the Absolute Encoder       7         3.5.3 Installing Absolute Encoder Battery Box       7	2 3

	3.5.4 Encoder Cable Specifications 79
	3.6 Communication Terminals (CN3 and CN4)80
	3.7 Communication Terminal (CN5)
	3.8 STO Safety Terminal (CN6)
	3.9 Wiring and Setting of the Regenerative Resistor
4 M	aintenance
	4.1 Routine Inspection.       92         4.1.1 Routine Checklist       92         4.1.2 Routine Cleaning List       92
	4.2 Regular Maintenance.934.2.1 Regular Checklist934.2.2 Periodic Maintenance List93
	4.3 Replacing Components.944.3.1 Replacing the Motor Flat Key944.3.2 Removing the Motor Oil Seal95
5 Ce	ertification and Standards Compliance97
	5.1 CE Certification       97         5.1.1 Requirement for Compliance with EMC Directive       98         5.1.2 Requirements for Compliance with LVD       99
	5.2 UL&cUL Certification
6 So	plutions To Common EMC Problems 104
	6.1 Malfunction of the Residual Current Device (RCD)
	6.2 Harmonic Suppression
	6.3 Control Circuit Interference       105         6.3.1 Common I/O Signal Interference       105         6.3.2 EtherCAT Communication Interference       107

# **Fundamental Safety Instructions**

### **Safety Precautions**

- This chapter presents essential safety instructions for a proper use of the equipment. Before operating the equipment, read through the guide and comprehend all the safety instructions. Failure to comply with the safety precautions may result in death, serious injury, or equipment damage.
- "CAUTION", "WARNING", and "DANGER" items in the guide only indicate some of the precautions that need to be followed; they just supplement the safety precautions.
- Use this equipment according to the designated environment requirements. Damage caused by improper use is not covered by warranty.
- Inovance shall take no responsibility for any personal injury or property damage caused by improper usage.

### Safety Levels and Definitions



Indicates that failure to comply with the notice can result in death or severe personal injury.

Indicates that failure to comply with the notice may result in death or severe personal injury.

Indicates that failure to comply with the notice may result in minor or moderate personal injury or equipment damage.

### **General Safety Instructions**

- Drawings in the guide are sometimes shown without covers or protective guards. Remember to install the covers or protective guards as specified first, and then perform operations in accordance with the instructions.
- The drawings in the guide are shown for illustration only and may be different from the product you purchased.

### Unpacking



- Do not install the equipment if you find damage, rust, or signs of use on the equipment or accessories upon unpacking.
- Do not install the equipment if you find water seepage or missing or damaged components upon unpacking.
- Do not install the equipment if you find the packing list does not conform to the equipment you received.



- Check whether the packing is intact and whether there is damage, water seepage, dampness, and deformation before unpacking.
- Unpack the package by following the unpacking sequence. Do not strike the package violently.
- Check whether there is damage, rust, or injury on the surface of the equipment and equipment accessories before unpacking.
- Check whether the package contents are consistent with the packing list before unpacking.

#### Storage and Transportation

- Large-scale or heavy equipment must be transported by qualified professionals using specialized hoisting equipment. Failure to comply may result in personal injury or equipment damage.
- Before hoisting the equipment, ensure the equipment components such as the front cover and terminal blocks are secured firmly with screws. Loosely-connected components may fall off and result in personal injury or equipment damage.
- Never stand or stay below the equipment when the equipment is being hoisted by the hoisting equipment.
- When hoisting the equipment with a steel rope, ensure the equipment is hoisted at a constant speed without suffering from vibration or shock. Do not turn the equipment over or let the equipment stay hanging in the air. Failure to comply may result in personal injury or equipment damage.

🔨 CAUTION

- Handle the equipment with care during transportation and mind your steps to prevent personal injury or equipment damage.
- When carrying the equipment with bare hands, hold the equipment casing firmly with care to prevent parts from falling. Failure to comply may result in personal injury.
- Store and transport the equipment based on the storage and transportation requirements. Failure to comply will result in equipment damage.
- Avoid storing or transporting the equipment in environments with water splash, rain, direct sunlight, strong electric field, strong magnetic field, and strong vibration.
- Avoid storing the equipment for more than three months. Long-term storage requires stricter protection and necessary inspections.
- Pack the equipment strictly before transportation. Use a sealed box for long-distance transportation.
- Never transport the equipment with other equipment or materials that may harm or have negative impacts on this equipment.

Installation

ANGER

• The equipment must be operated only by professionals with electrical knowledge. Nonprofessionals are not allowed.



- Read through the guide and safety instructions before installation.
- Do not install this equipment in places with strong electric or magnetic fields.
- Before installation, check that the mechanical strength of the installation site can bear the weight of the equipment. Failure to comply will result in mechanical hazards.
- Do not wear loose clothes or accessories during installation. Failure to comply may result in an electric shock.
- When installing the equipment in a closed environment (such as a cabinet or casing), use a cooling device (such as a fan or air conditioner) to cool the environment down to the required temperature. Failure to comply may result in equipment over-temperature or a fire.
- Do not retrofit the equipment.
- Do not fiddle with the bolts used to fix equipment components or the bolts marked in red.
- When the equipment is installed in a cabinet or final assembly, a fireproof enclosure providing both electrical and mechanical protections must be provided. The IP rating must meet IEC standards and local laws and regulations.
- Before installing equipments with strong electromagnetic interference, such as a transformer, install a shielding equipment for the equipment to prevent malfunction.
- Install the equipment onto an incombustible object such as a metal. Keep the equipment away from combustible objects. Failure to comply will result in a fire.

# 

- Cover the top of the equipment with a piece of cloth or paper during installation. This is to prevent unwanted objects such as metal chippings, oil, and water from falling into the equipment and causing faults. After installation, remove the cloth or paper on the top of the equipment to prevent over-temperature caused by poor ventilation due to blocked ventilation holes.
- Resonance may occur when the equipment operating at a constant speed executes variable speed operations. In this case, install the vibration-proof rubber under the motor frame or use the vibration suppression function to reduce resonance.





- Equipment installation, wiring, maintenance, inspection, or parts replacement must be performed only by professionals.
- Before wiring, cut off all the power supplies of the equipment. and wait for at least the time designated on the equipment warning label before further operations because residual voltage still exists after power-off. After waiting for the designated time, measure the DC voltage in the main circuit to ensure the DC voltage is within the safe voltage range. Failure to comply will result in an electric shock.
- Do not perform wiring, remove the equipment cover, or touch the circuit board with power ON. Failure to comply will result in an electric shock.
- Check that the equipment is grounded properly. Failure to comply can result in electric shock.



- Do not connect the input power supply to the output end of the equipment. Failure to comply can result in equipment damage or even a fire.
- When connecting a drive to the motor, check that the phase sequences of the drive and motor terminals are consistent to prevent reverse motor rotation.
- Cables used for wiring must meet cross sectional area and shielding requirements. The shield of the cable must be reliably grounded at one end.
- Fix the terminal screws with the tightening torque specified in the user guide. Improper tightening torque may overheat or damage the connecting part, resulting in a fire.
- After wiring is done, check that all cables are connected properly and no screws, washers or exposed cables are left inside the equipment. Failure to comply may result in an electric shock or equipment damage.



- Follow the proper electrostatic discharge (ESD) procedure and wear an anti-static wrist strap to perform wiring. Failure to comply may result in damage to the equipment or to the internal circuit of the product.
- Use shielded twisted pairs for the control circuit. Connect the shield to the grounding terminal of the equipment for grounding purpose. Failure to comply will result in equipment malfunction.

#### Power-on



- Before power-on, check that the equipment is installed and wired properly and the motor can be restarted.
- Check that the power supply meets equipment requirements before power-on to prevent equipment damage or a fire.
- After power-on, do not open the cabinet door or protective cover of the equipment, touch any terminal, or disassemble any unit or component of the equipment. Failure to comply will result in an electric shock.




- Perform a trial run after wiring and parameter setting to ensure the equipment operates safely. Failure to comply may result in personal injury or equipment damage.
- Before power-on, check that the rated voltage of the equipment is consistent with that of the power supply. Failure to comply will result in a fire.
- Before power-on, check that no one is near the equipment, motor, or machine. Failure to comply may result in death or personal injury.

#### Operation

DANGER • The equipment must be operated only by professionals. Failure to comply will result in death or personal injury. • Do not touch any connecting terminals or disassemble any unit or component of the equipment during operation. Failure to comply will result in an electric shock. WARNING • Do not touch the equipment casing, fan, or resistor with bare hands to feel the temperature. Failure to comply may result in personal injury. • Prevent metal or other objects from falling into the equipment during operation. Failure to comply may result in a fire or equipment damage. Maintenance DANGER • Equipment installation, wiring, maintenance, inspection, or parts replacement must be performed only by professionals. • Do not maintain the equipment with power ON. Failure to comply will result in an electric shock. • Before maintenance, cut off all the power supplies of the equipment and wait for at least the time designated on the equipment warning label. • In case of a permanent magnet motor, do not touch the motor terminals immediately after power-off because the motor terminals will generate induced voltage during rotation even after the equipment power supply is off. Failure to comply will result in an electric shock. WARNING Perform routine and periodic inspection and maintenance on the equipment according to maintenance requirements and keep a maintenance record. Repair DANGER • Equipment installation, wiring, maintenance, inspection, or parts replacement must be performed only by professionals.

- Do not repair the equipment with power ON. Failure to comply will result in an electric shock.
- Before inspection and repair, cut off all the power supplies of the equipment and wait for at least the time designated on the equipment warning label.

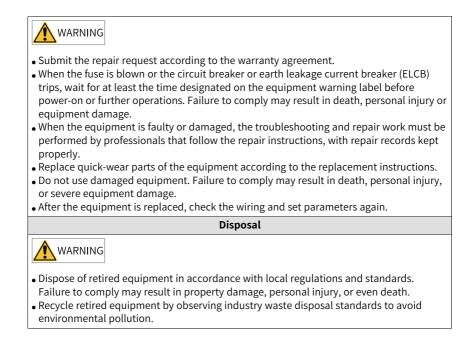

#### **Additional Precautions**

#### Cautions for the dynamic brake

- Dynamic braking can only be used for emergency stop in case of failure and sudden power failure. Do not trigger failure or power failure frequently.
- Ensure that the dynamic braking function has an operation interval of more than 5 minutes at high speed, otherwise the internal dynamic braking circuit may be damaged.
- Dynamic braking is common in rotating mechanical structures. For example, when a motor has stopped running, it keeps rotating due to the inertia of its load. In this case, this motor is in the regenerative state and short-circuit current passes through the dynamic brake. If this situation continues, the drive, and even the motor, may be burned.

### Safety label

For safe equipment operation and maintenance, comply with the safety labels on the equipment. Do not damage or remove the safety labels. The following table describes the meaning of the safety labels.

Safety label	Description
たた     たた     たた     ANGER     か     たい     たま     たま     はたま     はたま     や     はまれてのい     ない     ない	<ul> <li>Never fail to connect the protective earth (PE) terminal. Read through the guide and follow the safety instructions before use.</li> <li>Do not touch terminals within 15 minutes after disconnecting the power supply to prevent the risk of electric shock.</li> <li>Do not touch the heatsink with power ON to prevent the risk of burn.</li> </ul>

## 1 Installation

Read through the safety instructions in Chapter "Fundamental Safety Instructions". Failure to comply may result in serious consequence.



- Observe the installation direction described in this chapter. Failure to comply may result in equipment fault or damage.
- Do not install or operate damaged or defective equipment. Failure to comply can result in personal injury.
- Do not install the equipment in environments exposed to water splashes or corrosive gases. Failure to comply can result in equipment fault.
- Do not install the equipment near inflammable gases or combustible objects. Failure to comply can result in a fire or electric shock.
- Install the equipment inside a fire-proof cabinet that provides electrical protection. Failure to comply may result in a fire.
- Ensure the specified clearance is reserved among the servo drive, the interior surface of the control cabinet, and other machines. Failure to comply can result in a fire or equipment fault.
- Do not put heavy objects on the equipment. Failure to comply may result in personal injury or equipment damage.
- Do not subject the equipment to strong shock. Failure to comply may result in equipment damage.
- Do not block the air inlet/outlet of the equipment or allow unwanted objects to fall into the equipment. Failure to comply may result in a fire or equipment fault.

### 1.1 Installing the Servo Drive


### 1.1.1 Unpacking and Handling

Check the following items upon unpacking.

Item	Description
Check whether the delivered product is consistent with your order.	Check whether the servo drive model and specifications comply with your order. See the dimensions of the packing box in <i>"Table 1–1 " on page</i> <i>15.</i> The deliverables include the product, cushion, carton box, and screw bag, as shown in <i>"Figure 1–1 " on page 15</i> .
Check whether the product is intact.	Check whether the product delivered is in good condition. If there is any missing or damage, contact Inovance or your supplier immediately.

<i>c</i> :	Servo drive model	Outer width	Outer height	Outer depth	Weight
Size	SV660N****I	(mm)	(mm)	(mm)	(kg)
Α	S1R6, S2R8	250.0	90.0	195	0.96
B S5R5		225.0	90	205.0	1.17
C S7R6, T3R5, T5R4		235.0	105.0	215.0	1.48
D S012, T8R4, T012		235.0	130.0	225.0	2.02
E	T017, T021, T026	320.0	150.0	280.0	3.94

Table 1–1 Dimensions of the outer packing box

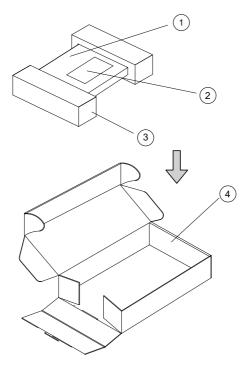



No.	Name
1	Product
2	Terminal accessories (varying with product models)
3	Cushion
(4)	Carton box

### 1.1.2 Installation Environment

Item	Requirement
Installation location	Indoors
Grid overvoltage	Overvoltage Class III (OVC III).
Altitude	<ul> <li>The maximum altitude is 2000 m.</li> <li>For altitudes not higher than 1000 m, derating is not required.</li> <li>Derating is required for altitudes above 1000 m (derate 1% for every additional 100 m).</li> <li>For altitudes above 2000 m, contact Inovance.</li> </ul>
Temperature	<ul> <li>Mounting/Operating temperature: 0°C to 55°C For temperatures between 0°C to 45°C, derating is not required. For temperatures above 45°C, derate 2% for every additional 1°C.</li> <li>Storage/Transportation temperature: -20°C to +70°C.</li> <li>To improve the reliability of the machine, use the servo drive in environments without dramatic temperature change.</li> <li>When installing the servo drive into an enclosed environment such as a control cabinet, use a cooling fan or air conditioner to keep the temperature of the inlet air below 45°C. Failure to comply will result in overheat or fire.</li> <li>Install the servo drive on the surface of an incombustible object and leave sufficient surrounding space for heat dissipation.</li> <li>Take measures to prevent the servo drive from being frozen.</li> </ul>
Ambient humidity	Below 90% RH (no condensation)
Storage humidity	Below 90% RH (no condensation)
Vibration	<ul> <li>Below 4.9m/s<sup>2</sup></li> <li>During transportation with packing box: compliant with EN 60721- 3-2 Class 2M3.</li> <li>During installation without packing box: compliant with ISTA 1H.</li> </ul>
Shock	Below 19.6m/s <sup>2</sup>

Table 1–2 Environment requirements

Item	Requirement
IP rating	IP20.
Environment	<ul> <li>Pollution Degree 2 and below</li> <li>Install the servo drive in a place that meets the following requirements:</li> <li>Free from direct sunlight, dust, corrosive gas, explosive and inflammable gas, oil mist, vapor, water drop, and salty element</li> <li>Insusceptible to vibration (away from equipment that may generate strong vibration, such as a punch press)</li> <li>Free from unwanted objects such as metal powder, oil, and water inside the servo drive</li> <li>Free from radioactive substances, combustible materials, harmful gases and liquids, and salt corrosion</li> <li>Away from combustible materials such as wood</li> <li>Do not use the equipment in vacuum.</li> </ul>

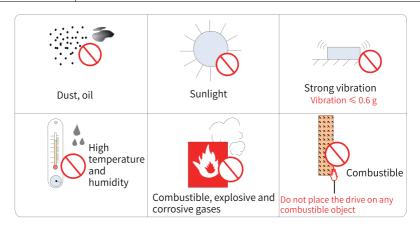


Figure 1-2 Environment requirements

### 1.1.3 Installation Clearance

Servo drives in different power ratings require different installation clearances. When installing multiple servo drives side by side, it is recommended to reserve a clearance of at least 10 mm (0.39 in.) between every two servo drives and a clearance of at least 50 mm (1.97 in.) above and below each servo drive for heat dissipation.

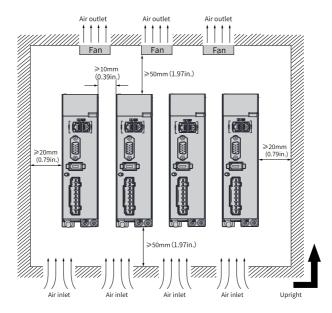


Figure 1-3 Clearance for side-by-side installation

Servo drives rated at 0.2 kW to 0.75 kW (size A and size B) support compact installation, in which a clearance of at least 1 mm (0.04 in.) must be reserved between every two servo drives. When adopting compact installation, derate the load rate to 75%.

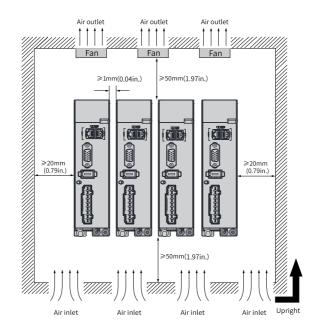


Figure 1-4 Clearance for compact installation

Servo drives in sizes C and D (rated power: 1.0 kW to 3 kW) support zero-clearance installation between every two servo drives, without the need for derating.

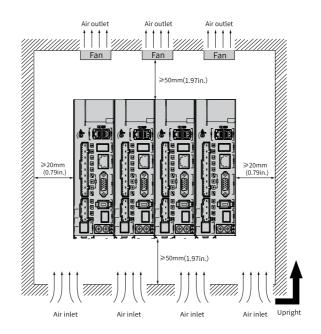


Figure 1-5 Zero-clearance installation

### 1.1.4 Installation Dimensions

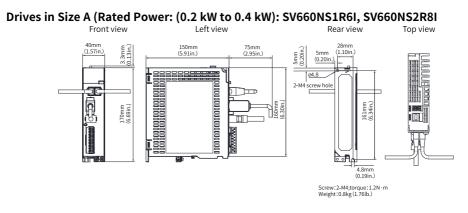


Figure 1-6 Dimension drawing of servo drives in size A

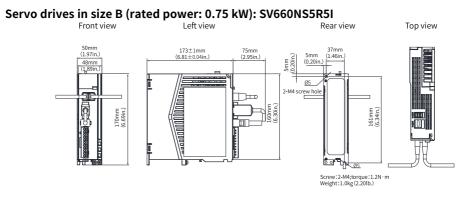


Figure 1-7 Dimension drawing of servo drives in size B

# Drives in Size C (Rated Power: (1.0 kW to 1.5 kW): SV660NS7R6I, SV660NT3R5I, SV660NT5R4I

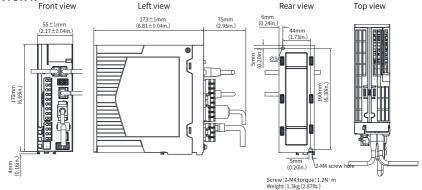


Figure 1-8 Dimension drawing of servo drives in size C

# Drives in Size D (Rated Power: (1.5 kW to 3.0 kW): SV660NS012I, SV660NT8R4I, SV660NT012I



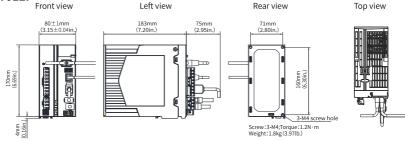


Figure 1-9 Dimension drawing of servo drives in size D

# Drives in Size E (Rated Power: (5.0 kW to 7.5 kW): SV660NT017I, SV660NT021I, SV660NT026I

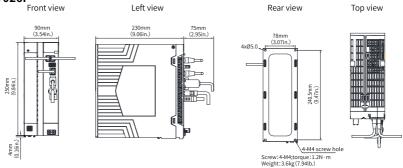



### 1.1.5 Installation Precautions


Table 1–3 Installation	Precautions
------------------------	-------------

Item	Description
Installation Method	<ul> <li>Install the servo drive vertically and upward to facilitate heat dissipation. For installation of multiple servo drives inside the cabinet, install them side by side. For dual-row installation, install an air guide plate.</li> <li>Make sure the servo drive is installed vertically to the wall. Cool the servo drive down with natural convection or a cooling fan. Secure the servo drive to the mounting surface through two to four mounting holes (the number of mounting holes depends on the capacity of the servo drive).</li> <li>Install the servo drive vertically to the wall, with its front (actual mounting face) facing the operator.</li> <li>The mounting bracket (if needed) must be made of incombustible materials.</li> </ul>
Cooling	As shown in "1.1.4 Installation Dimensions" on page 20, reserve sufficient space around the servo drive to ensure a good heat dissipation through the cooling fan or natural convection. Take the heat dissipated by other devices inside the cabinet into consideration. Install a cooling fan to the upper part of the servo drive to avoid excessive temperature rise in a certain area, keeping an even temperature inside the control cabinet.
Grounding	Ground the grounding terminal properly. Failure to comply may result in electric shock or malfunction due to interference.

Item	Description
	As shown in the figure below, route the servo drive cables downwards to prevent liquid from flowing into the servo drive along the cables.
Wiring requirements	Route the cable in the direction of the arrow
Dust-proof cover (included in the standard configuration)	Insert the dust-proof cover into the communication port (CN5/ CN6) not in use. This is to prevent unwanted objects, such as solids or liquids, from falling into the servo drive and resulting in faults. Each servo drive is delivered with two dust-proof covers inserted into the communication ports by default. You can place an order for more dust-proof covers as needed (model: NEX-02-N2B; manufacturer: PINGOOD). <b>Note:</b> • Dust-proof cover: Prevents unwanted objects, such as solids or liquids, from falling into the servo drive and resulting in faults. • Dust-proof covers are delivered along with the servo drive. Keep the dust-proof covers in a proper place.

### 1.1.6 Installation Guide

The servo drive supports backplate mounting only.

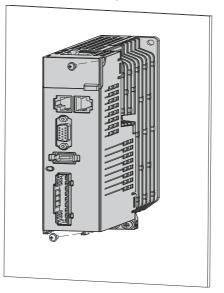



## Note

- Servo drives in sizes A and C are secured by two screws, with one screw on the top and the other one at the bottom.
- Servo drives in size D are secured by three screws, with two screws on the top and another one at the bottom.
- Servo drives in size E are secured by four screws, with two screws on the top and the other two at the bottom.

## 1.2 Installing the Options

### 1.2.1 Instructions for Installing the Fuse and Circuit Breaker



To prevent electric shock, when the fuse is blown or the circuit breaker trips, wait for at least the time designated on the warning label before powering on the drive or operating peripheral devices. Failure to comply can result in death, severe personal injury, or equipment damage.

To comply with EN 61800-5-1 and UL 61800-5-1, install a fuse/circuit breaker on the input side of the servo drive to prevent accidents caused by short circuit in the internal circuit.

### 1.2.2 Instructions for Installing the AC Input Reactor

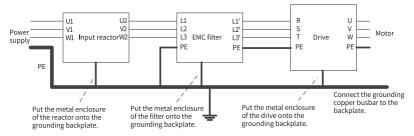


Figure 1-12 Installing the AC input reactor

### 1.2.3 Instructions for Installing the EMC Filter

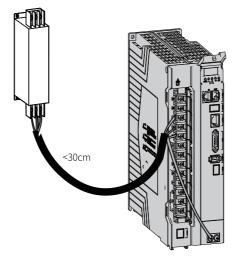


Figure 1-13 Installing the AC input reactor

## 1.2.4 Installation of the Magnetic Ring and Ferrite Clamp


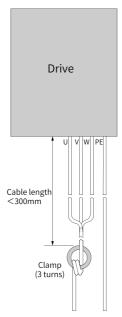


Figure 1-14 Installation of the magnetic ring



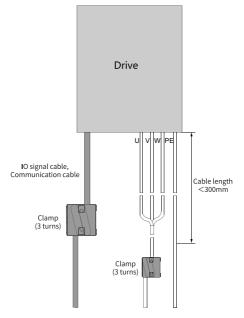

### 1.2.5 屏蔽支架的安装说明

EMC支架以及与其匹配的喉箍配和伺服线缆使用,以减轻电磁干扰。

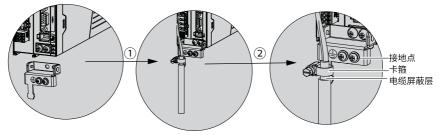


Figure 1-16 屏蔽支架安装示意图

- ①:用2颗M4螺钉将屏蔽支架固定到驱动器上,建议锁紧扭矩1.2Nm。
- ②:将卡箍套在电缆屏蔽层和屏蔽支架上,拧紧螺钉使用电缆屏蔽层固定在屏蔽支架
  - 上;依据接线图纸,完成电机动力线及抱闸电缆的接线。

## 2 System Wiring Diagram

## 2.1 System Wiring Diagram

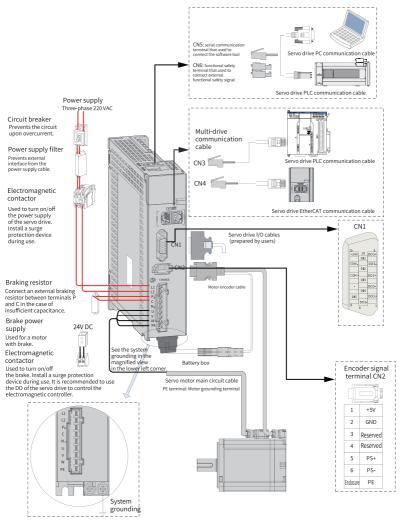


Figure 2-1 Wiring example of a single-phase 220 V system

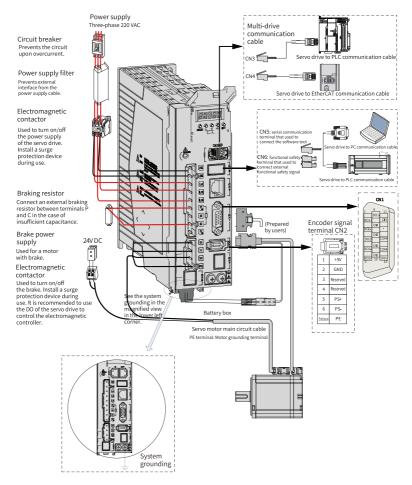


Figure 2-2 Wiring example of a three-phase 380 V system

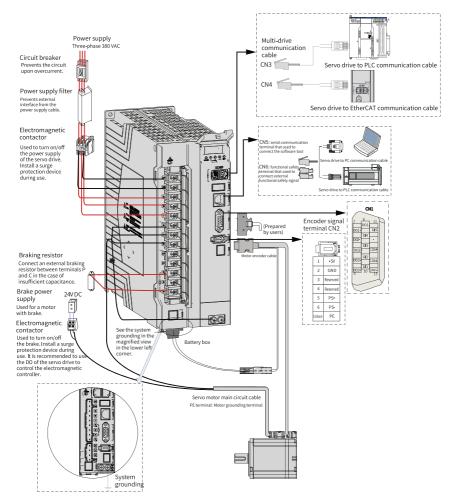


Figure 2-3 Wiring example of a three-phase 380 V system

## Note

- When an external braking resistor is needed, connect it between terminals P and C (remove the jumper bar between terminals P and D). If an external braking resistor is not needed, short terminals P and D. Size A models are not equipped with built-in braking resistor or jumper bar between terminals P and D.
- CN6 (STO terminal) is only applicable to non-standard "-FS" models.

### 2.2 System Structure

- The servo drive is directly connected to an industrial power supply, with no isolation such as a transformer. A fuse or circuit breaker therefore must be connected to the input power supply to prevent electric shock in the servo system. For the sake of safety, install a residual current device (RCD) to provide protections against overload and short circuit or a specialized RCD to protect the grounding cable.
- Do not start or stop the motor by using the electromagnetic contactor. As a highinductance device, the motor may generate high voltages instantaneously, which may break down the contactor.
- When connecting an external power supply to the control circuit or a 24 VDC power supply, pay attention to the power capacity as insufficient power capacity will lead to insufficient supply current, resulting in failure of the servo drive or the brake. This is especially true when the power supply is used to power up multiple servo drives or brakes. The brake must be powered up by a 24 VDC power supply that matches the motor model and meets the brake power requirements.

## Note

- The built-in braking resistor or jumper bar is not available in models S1R6 and S2R8. If an external braking resistor is needed for these models, connect it between terminals P⊕ and C.
- Remove the jumper between P⊕ and D before using the external braking resistor. Failure to comply will result in overcurrent and damage the braking transistor.
- Do not connect the external braking resistor to the positive or negative pole of the bus directly. Failure to comply will damage the servo drive and result in a fire.
- Do not select any resistor lower than the minimum allowed resistance value. Failure to comply will result in E201.0 (Hardware overcurrent) or damage the servo drive.
- Make sure parameters H02.25 (Braking resistor setting), H02.26 (Power of external braking resistor) and H02.27 (Resistance of external braking resistor) are set properly before operating the servo drive.
- Install the external braking resistor on an incombustible object such as a metal.

# 3 Introduction to Wiring Terminals

## 3.1 Wiring Precautions

# Warning

Read through the safety instructions in Chapter "Fundamental Safety Instructions". Failure to comply may result in serious consequences.

- Do not use the power from IT system for the servo drive. Use the power from TN/ TT system for the drive. Failure to comply may result in an electric shock.
- Connect an electromagnetic contactor between the input power supply and the main circuit power supply of the drive (L1, L2 for single-phase; L1, L2, L3/R, S, T for three-phase) to form a structure allowing independent power cutoff on the power supply side of the drive. This is to prevent fire accident caused by continuous high current generated upon fault.
- Check that the input power supply of the drive is within the specified voltage range. Failure to comply may result in faults.
- Do not connect the output terminals U, V, and W of the drive to a three-phase power supply. Failure to comply may result in physical injury or a fire.
- Do not connect the motor terminals U, V, and W to a mains power supply. Failure to comply may result in physical injury or a fire.
- Use the ALM (fault) signal to cut off the main circuit power supply. A faulty braking transistor may overheat the regenerative resistor and lead to a fire.
- Connect the PE terminal of the drive to the PE terminal of the control cabinet. Failure to comply may result in an electric shock.
- Ground the entire system properly. Failure to comply may result in equipment malfunction.
- After the power supply is cut off, residual voltage is still present in the internal capacitor of the drive, wait for at least 15 min before further operations. Failure to comply may result in an electric shock.



- The specification and installation of external cables must comply with applicable local regulations.
- Observe the following requirements when the servo drive is used on a vertical axis.
  - Set the safety device properly to prevent the workpiece from falling upon warning or overtravel.
  - Ensure the positive/negative polarity of the 24 V power supply is correct.
     Otherwise, the axis may fall and cause personal injury or equipment damage.
- Observe the following requirements during wiring of the power supply and main circuit:
  - When the main circuit terminal is a connector, remove the connector from the servo drive before wiring.
  - Insert one cable into one cable terminal of the connector. Do not insert multiple cables into one cable terminal.
  - When inserting cables, take enough care to prevent the cable conductor burrs from being short circuited to the neighboring cable.
  - Insulate the connecting part of the power supply terminals to prevent electric shock.
  - Do not connect a 220 V servo drive to a 380 V power supply directly.
  - Install safety devices such as a circuit breaker to prevent short circuit in external circuits. Failure to comply may result in a fire.
  - Cut off the main circuit power supply and switch off the S-ON signal after an alarm signal is detected.
  - After all cables are connected, it is recommended to tie them at the point 10cm–20cm away from the connector end.
- Connect the servo drive to the motor directly. Do not use an electromagnetic contactor during wiring. Failure to comply may result in equipment fault.
- Do not put heavy objects onto cables or pull cables with excessive force. Failure to comply may result in cable damage, leading to an electric shock.
- When connecting DO terminals to relays, ensure the polarity of the flywheel diode is correct. Wrong polarity will result in equipment damage or signal output failure.
- Keep a distance of at least 30 cm between main circuit cables and I/O signal cables/encoder cables. Failure to comply may result in equipment malfunction.
- Use twisted pairs or multi-conductor shielded twisted pairs as the I/O signal cable or encoder cable. Failure to comply may result in equipment malfunction.
- The maximum wiring lengths of the I/O signal cable and the encoder cable are 3 m and 10 m respectively.
- Use a power supply filter to reduce the electromagnetic interference on electronic devices surrounding the servo drive.
- Take proper shielding measures in the following locations to prevent equipment damage:

- Locations with interference caused by static electricity
- Locations with strong electric field or magnetic field
- Locations with radioactive rays

### 3.2 Terminal Pin Layout of the Servo Drive

# Servo drives in size A (rated power: 0.2 kW to 0.4 kW): SV660NS1R6I and SV660NS2R8I


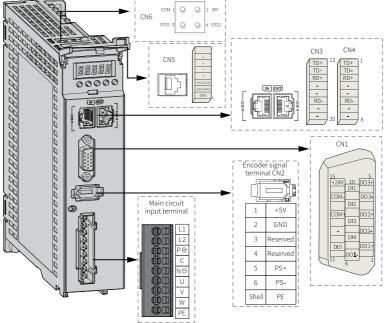


Figure 3-1 Terminal pin layout of servo drives in size A

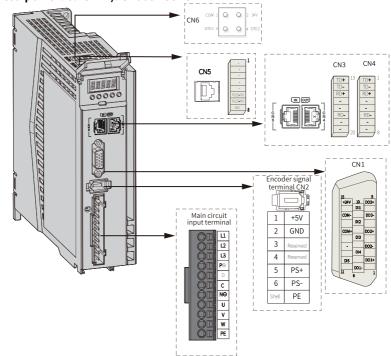

Size B (rated power: 0.75 kW): SV660NS5R5I

Figure 3-2 Terminal pin layout of servo drives in size B

# Sizes C and D (rated power: 1.0 kW to 3.0 kW): size C: SV660NS7R6I/D: SV660NS012I


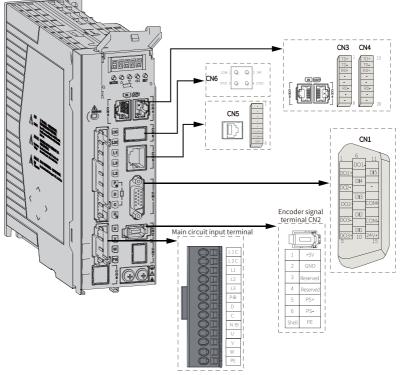


Figure 3-3 Terminal pin layout of servo drives in size C and size D (220V)

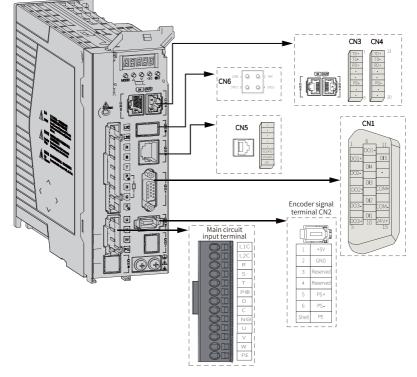

# Sizes C and D (rated power: 1.0 kW to 3.0 kW): size C: SV660NT3R5I and SV660NT5R4I; size D: SV660NT8R4I, SV660NT012I

Figure 3-4 Terminal pin layout of servo drives in size C and size D (380V)

# Size E (rated power: 5.0 kW to 7.5 kW): SV660NT017I, SV660NT021I, and SV660NT026I

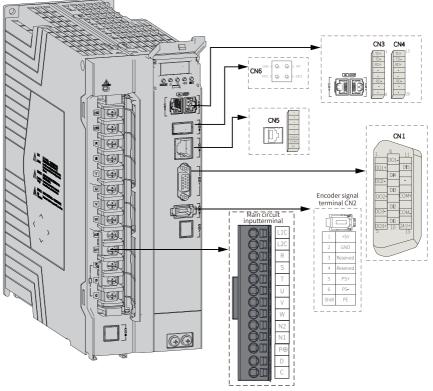


Figure 3-5 Terminal pin layout of servo drives in size E

## Note

CN6 (STO terminal) is only applicable to customized model -FS.

# 3.3 Introduction to Main Circuit Terminals

### 3.3.1 Wiring Precautions

- Do not connect the input power supply cables to the output terminals U, V, and W. Failure to comply will damage the servo drive.
- When cables are bundled in a duct, take current reduction ratio into consideration because of the poor cooling condition.

- It is recommended to use Teflon cables featuring a higher temperature limit when the temperature inside the cabinet exceeds the temperature limit of regular cables. As the surface of regular cables may be easily hardened and cracked under low temperature, take thermal insulation measures for cables laid in environments with low temperature.
- The bending radius of a cable must be more than 10 times its outer diameter to prevent the internal conductor from breaking due to long-time bending.
- Use cables with a rated voltage above 600 VAC and rated temperature above 75°C. Under an ambient temperature of 30°C and normal cooling conditions, the permissible current density of the cable cannot exceed 8 A/mm<sup>2</sup> when the total current is below 50 A, or 5 A/mm<sup>2</sup> when the total current is above 50 A. The permissible current density (A/mm<sup>2</sup>) can be adjusted based on the following formula in case of high ambient temperature or bundled Cable. Permissible current density = 8 x Reduction coefficient of conductor current-

carrying density x Current correction coefficient

Current correction coefficient =  $\sqrt{(Cable max. allowable temp. - Ambient temp.) \div 30}$ 




Table 3–1 Reduction coefficient of conductor current-carrying density

Number of Cables in the Same Duct	Current Reduction Coefficient
< 3	0.7
4	0.63
5–6	0.56
7–15	0.49

- Do not bundle power cables and signal cables together or route them through the same duct. Power cables and signal cables must be separated by at least 30 cm to prevent interference.
- High voltage may be still present in the servo drive after the power supply is switched off. Do not touch the power supply terminals within 5 minutes after power-off.
- Do not switch on/off the power supply frequently. If the power supply is switched on or off frequently within 1s, E740/E136/E430 may occur (see section Description of Error Codes in SV660N Series Servo Drive Troubleshooting Guide). In this case, power on the servo drive again after waiting for the specified ON/OFF interval. If

frequent ON/OFF operation is needed, the time interval between ON and OFF must be at least 1 min.


The servo drive carries a capacitor in the power supply part, and this capacitor will be charged with a high current for 0.2s upon power-on. Turning on/off the power supply frequently affects the performance of main circuit components inside the servo drive.


- Use a grounding cable with the same cross-sectional area as the main circuit cable. If the cross-sectional area of the main circuit cable is less than 1.6 mm<sup>2</sup>, use a grounding cable with a cross-sectional area of 2.0 mm<sup>2</sup>.
- The servo drive must be grounded properly. Failure to comply may result in device malfunction or damage.
- Do not power on the servo drive if terminal screws or cables are loose. Failure to comply may lead to a fire.

### 3.3.2 Main Circuit Wiring Requirements

Servo drive power input cables and motor cables may generate strong electromagnetic interference. To prevent the electromagnetic interference incurred by long-distance parallel routing and coupling between disturbing cables and control cables, keep a clearance of at least 30 cm between main circuit cables and signal cables. Main circuit cables include the RST cable, UVW cable, DC bus, and braking cable. Signal cables include the I/O signal cable, communication cable, and encoder cable.

Cable ducts must be connected and grounded properly. Aluminum cable ducts can be used to ensure equipotentiality of the device. The filter, servo drive, and motor must be properly connected to systems (machines or devices), with spraying protection applied at the installation part and the conductive metal kept in full contact.





#### Wiring requirements

The wiring mode compliant with the Low Voltage Directive is supported.

• Terminals P⊕, C, and NΘ are used to connect optional parts. Do not connect these terminals to an AC power supply.

- To protect the main circuit, separate and cover the surface that may come into contact with the main circuit.
- Prevent foreign objects from entering the wiring area of the terminal block.
- Do not solder the twisted conductors.
- The tightening torque may vary with terminals. Tighten terminal screws with the specified tightening torque. You can use a torque screwdriver, torque ratchet, or torque wrench to tighten terminal screws.
- When using an electric screwdriver to tighten terminal screws, set the electric screwdriver to low speed to prevent damage to the terminal screws.
- Tighten the terminal screws with an angle not greater than 5°. Failure to comply may damage the terminal screws.

### 3.3.3 Recommended Cable Specifications and Models

Drive mod	el SV660N****I	Rated input current (A)	Rated output current (A)	Maximum output current (A)
		Single-phase 22	20 V	
c:	S1R6	2.3	1.6	5.8
Size A	S2R8	4	2.8	10.1
Size B	S5R5	7.9	5.5	16.9
Size C	S7R6	9.6	7.6	23
Size D	S012	12.8	11.6	32
		Three-phase 22	20 V	
Size C	S7R6	5.1	7.6	23
Size D	S012	8	11.6	32
		Three-phase 38	30 V	
Size C	T3R5	2.4	3.5	11
SIZEC	T5R4	3.6	5.4	14
Size D	T8R4	5.6	8.4	20
SIZE D	T012	8	11.9	29.75
	T017	12	16.5	41.25
Size E	T021	16	20.8	52.12
	T026	21	25.7	64.25

Table 3-2 Input/Output current specifications of the servo drive

	rive mod V660N**		L1C, L2	2C	L1, L2, L3,	/R, S, T	P⊕, D, C, N2, N		U, V, W	/, PE	Groundi termina	0
Size	Model	Rated input cur rent (A)	(mm <sup>2</sup> )	(AW G)	(mm <sup>2</sup> )	(AWG)	(mm <sup>2</sup> )	(AW G)	(mm <sup>2</sup> )	(AWG)	(mm <sup>2</sup> )	(AW G)
					Sin	gle-phase	e 220 V					
C: A	S1R6	2.3	2x0.52	20	3x0.52	20	2x0.52	20	3x0.52	20	0.52	20
Size A	S2R8	4	2x0.52	20	3x0.52	20	2x0.52	20	3x0.52	20	0.52	20
Size B	S5R5	7.9	2x0.52	20	3x0.52	20	2x0.52	20	3x0.52	20	0.52	20
Size C	S7R6	9.6	2x0.82	18	3x0.82	18	2x0.82	18	3x0.82	18	0.82	18
Size D	S012	12.8	2x1.31	16	3x1.31	16	2x1.31	16	3x1.31	16	1.31	16
					Thr	ee-phase	e 220 V					
Size C	S7R6	5.1	2x0.52	20	3x0.52	20	2x0.52	20	3x0.52	20	0.52	20
Size D	S012	8	2x1.31	16	3x1.31	16	2x1.31	16	3x1.31	16	1.31	16
					Thr	ee-phase	e 380 V					
Size C	T3R5	2.4	2x0.52	20	3x0.52	20	2x0.52	20	3x0.52	20	0.52	20
SIZEC	T5R4	3.6	2x0.52	20	3x0.52	20	2x0.52	20	3x0.52	20	0.52	20
Size D	T8R4	5.6	2x0.52	20	3x0.52	20	2x0.52	20	3x0.52	20	0.52	20
JIZE D	T012	8	2x1.31	16	3x1.31	16	2x1.31	16	3x1.31	16	1.31	16
	T017	12	2x2.08	14	3x2.08	14	2x2.08	14	3x2.08	14	2.08	14
Size E	T021	16	2x2.08	14	3x2.08	14	2x2.08	14	3x2.08	14	2.08	14
	T026	21	2x3.33	12	3x3.33	12	2x3.33	12	3x3.33	12	3.33	12

Table 3–3 Recommended main circuit cables

### Table 3–4 Recommended cable specifications and models

Cable type	Cable specification	Outer diameter (mm)
	4x12AWG	12.2±0.4
	4x14AWG	10.5±0.3
Power cable	4x16AWG	9.5±0.4
	4x18AWG	7.8±0.2
	4x20AWG	6.5±0.2
	4x12AWG	12.9±0.4
	4x14AWG	11.2±0.4
Shielded power cable	4x16AWG	10.1±0.4
	4x18AWG	8.3±0.2
	4x20AWG	6.5±0.2
Power cable + brake cable	$4 \times 20$ AWG + $2 \times 24$ AWG	6.5±0.2
	2x18AWG	5.8±0.2
Brake cable	2x20AWG	5.0±0.2

Servo	Servo drive model SV660N****I			commended PVC o	able model (at 40	Р°С)			
Size	Model	Rated input current (A)	U, V, W, PE cable lug	Brake cable lug	Grounding cable lug	Tightening torque (N∙m)			
	Single-phase 220 V								
Size A	S1R6	2.3			TVR2-4	-			
Size A	S2R8	4	CTVE 10000		TVR2-4	-			
Size B	S5R5	7.9	GTVE10008 GTVE05008	TVR2-4	-				
Size C	S7R6	9.6			TVR2-4	-			
Size D	S012	12.8	GTVE15008	GTVE10008	TVR2-4	-			
			Three-phase 220 \	/					
Size C	S7R6	5.1	GTVE10008	GTVE05008	TVR2-4	-			
Size D	S012	8	GTVE15008	GTVE10008	TVR2-4	-			
			Three-phase 380 \	/					
Size C	T3R5	2.4			TVR2-4	-			
SIZE C	T5R4	3.6	GTVE10008	GTVE05008	TVR2-4	-			
Circ D	T8R4	5.6			TVR2-4	-			
Size D	T012	8	GTVE15008	GTVE10008	TVR2-4	-			
	T017	12	TVS1.25-4	GTVE10008	TVR1.25-4	1.36			
Size E	T021	16	TVS2-4	GTVE10008	TNR2-4	1.36			
	T026	21	TVS3.5-4	GTVE10008	TNR3.5-4	1.36			

Table 3–5 Main circuit cable lug a	and tightening torque
------------------------------------	-----------------------

Table 3–6 Dimensions and appearance of TVR2-4 cable lug

Lug r	nodel	D (mm)	d2 (mm)	B (mm)	Appearance
TVR	2-4	4.5	4.3	8.5	\$0 \$

Table 3–7 Recommended	terminal blocks
-----------------------	-----------------

Servo drive mo	del SV660N****I	Terminal block
Size A	S1R6	9EDGK-5.0-09P-13-01AH & Gaozheng & B/BBB1
SIZE A	S2R8	3ED0K-3.0-03F-13-01AH & 0802HEIB & 0/0001
Size B	S5R5	9EDGK-5.0-11P-13-05AH & Gaozheng & B/BBA2
	S7R6	
Size C	T3R5	
	T5R4	9EDGK-7.5-09P-13-1014A(H) & Gaozheng & B/BAB1+9EDGK-7.5-04P-13-1015A_H &
	S012	Gaozheng & B/BAA2
Size D	T8R4	
	T012	


Servo drive mo	del SV660N****I	Terminal block
	T017	
Size E	T021	-
	T026	

#### Table 3–8 Specifications of motor output cables

MS1H1/H4 05B-10C (0.05 kW to 1 kW)					
Cable type	Regular cable	Flexible cable	Oil-resistant shielded flexible cable		
Cable model	S6-L-M/B***-X.X	S6-L-M/B***-X.X-T	S6-L-M/B***-X.X-TS		
	UL2517 (rated temperature: 105°C) 4Ex20AWG+2Cx24AWG	UL2517 (rated temperature: 105°C) 4Ex20AWG+2Cx24AWG	UL2517 (rated temperature: 105°C) 4Ex20AWG+2Cx24AWG		
Cable specifications	Power cable: 20AWG (0.52 mm <sup>2</sup> ) OD of insulation: 1.7 mm	Power cable: 20AWG (0.52 mm <sup>2</sup> ) OD of insulation: 1.7 mm	Power cable: 20AWG (0.52 mm <sup>2</sup> ) OD of insulation: 1.7 mm		
	Brake cable: 24AWG (0.205 mm <sup>2</sup> ) OD of insulation: 1.1 mm	Brake cable: 24AWG (0.205 mm <sup>2</sup> ) OD of insulation: 1.1 mm	Brake cable: 24AWG (0.205 mm <sup>2</sup> ) OD of insulation: 1.1 mm		
Sheath outer diameter		φ6.5 (0.2 mm)			
Internal structure and conductor colors					
Fill in "X.X" of the model	number with cable length.				

### Table 3–9 Specifications of motor output cables

	MS1H2 10C-50C (1 kW to 5 kW)/MS1H3 85B-18C (0.85 kW to 1.8 kW)					
Cable type	Regular cable	Flexible cable	Oil-resistant shielded flexible cable			
Cable model	S6-L-M/B***-X.X	S6-L-M/B***-X.X-T	S6-L-M/B***-X.X-TS			
Cable specifications	UL2586 (rated temperature: 105℃) 4Ex16AWG, 2Cx18AWG	UL2586 (rated temperature: 105℃) 4Ex16AWG, 2Cx18AWG	UL2586 (rated temperature: 105°C) 4Ex16AWG, 2Cx18AWG			
	Power cable: 16AWG (1.31 mm <sup>2</sup> ) OD of insulation: 3.1 mm	Power cable: 16AWG (1.31 mm <sup>2</sup> ) OD of insulation: 3.25 mm	Power cable: 16AWG (1.31 mm <sup>2</sup> ) OD of insulation: 3.25 mm			
	Brake cable: 18AWG (0.823 mm <sup>2</sup> ) OD of insulation: 2.0 mm	Brake cable: 18AWG (0.823 mm <sup>2</sup> ) OD of insulation: 2.15 mm	Brake cable: 18AWG (0.823 mm <sup>2</sup> ) OD of insulation: 2.15 mm			
Sheath outer diameter	φ9.5±0.3 mm (main circuit)	$\phi$ 10.0±0.3 mm (main circuit)	$\phi$ 10.5±0.3 mm (main circuit)			

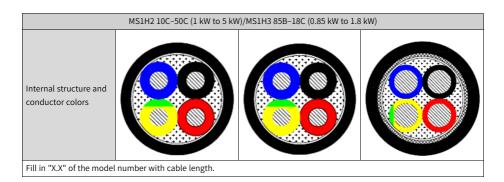

#### Table 3–10 Specifications of motor output cables

MS1H3 29C-75C (2.9 kW to 7.5 kW)						
Cable type	Regular cable	Flexible cable	Oil-resistant shielded flexible cable			
Cable model	S6-L-M/B***-X.X	S6-L-M/B***-X.X-T	S6-L-M/B***-X.X-TS			
	UL2586 (rated temperature: 105℃) 4Ex12AWG, 2Cx18AWG	UL2586 (rated temperature: 105°C) 4Ex12AWG, 2Cx18AWG	UL2586 (rated temperature: 105°C) 4Ex12AWG, 2Cx18AWG			
Cable specifications	Power cable: 12AWG (3.31 mm <sup>2</sup> ) OD of insulation: 4.1 mm	Power cable: 12AWG (3.31 mm <sup>2</sup> ) OD of insulation: 4.2 mm	Power cable: 12AWG (3.31 mm <sup>2</sup> ) OD of insulation: 4.2 mm			
	Brake cable: 18AWG (0.823 mm <sup>2</sup> ) OD of insulation: 2.0 mm	Brake cable: 18AWG (0.823 mm <sup>2</sup> ) OD of insulation: 2.15 mm	Brake cable: 18AWG (0.823 mm <sup>2</sup> ) OD of insulation: 2.15 mm			
Sheath outer diameter	$\phi$ 12.2 $\pm$ 0.4 mm (main circuit)	$\phi$ 12.5 $\pm$ 0.4 mm (main circuit)	$\phi$ 13.2 $\pm$ 0.4 mm (main circuit)			
Internal structure and conductor colors						
Fill in "X.X" of the model number with cable length.						

#### **Cable selection**

To comply with the EMC standards, use shielded cables. You can use shield-less cables if EMC is not a concern.

Shielded cables are divided into three-conductor shielded cables and four-conductor shielded cables, as shown in the following figure.

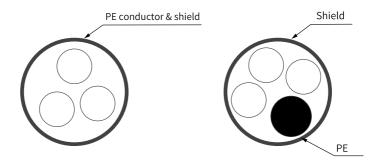


Figure 3-7 Recommended power cable

If the conductivity of the three-conductor cable shield is insufficient, add an extra PE cable. Or use a four-core shielded cable, with one core being the PE wire. The shield of the shielded cable is comprised of coaxial cooper braids to suppress radio frequency interference. To enhance the shielding performance and conductivity, the braided density of the shield must be greater than 90%.

Observe national or regional regulations when selecting cable dimensions. The IEC cable must meet the following requirements:

- Compliant with IEC 60204-1 and IEC 60364-5-52 standards
- PVC insulated cables with copper conductors
- Heat resistance: ambient temperature of 40°C and cable surface temperature of 70°C (Contact the manufacturer if the ambient temperature exceeds 40°C.)

Requirements for UL cable selection are described in *" Cable requirements" on page 101*.

# Note

If the recommended cable specifications for peripheral devices or optional parts exceed the applicable cable specification range, contact Inovance.

# 3.3.4 Main Circuit Terminal Layout

### Size A (rated power: 0.2 kW to 0.4 kW): SV660NS1R6I, SV660NS2R8I

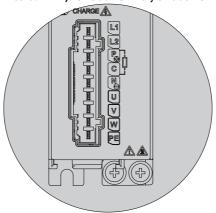


Figure 3-8 Main circuit terminal pins of size A drive

<b>T     0 11 D   1  </b>	c		c
Table 3–11 Description o	t main circuit	terminal pins o	t servo drives in size A
Tuble 5 II Description 0	i mani circuit	terminat pins o	1 301 10 0111003 111 3120 71

No.	Name	Description
1	L1, L2 (power input terminals)	See the nameplate for the rated voltage class.
	P⊕, N⊖ (DC bus terminals)	Used by the common DC bus for multiple servo drives. Contact Inovance for technical support.
2	P⊕, C Terminals for connecting external braking resistor	If an external braking resistor is needed, connect it between terminals P⊕ and C.
3	U, V, W (terminals for connecting the servo motor)	Connected to U, V, and W phases of the servo motor.
4	Motor grounding terminal	Connected to the grounding terminal of the motor for grounding purpose.

### Rated power: (size B: 0.75 kW): SV660NS5R5I

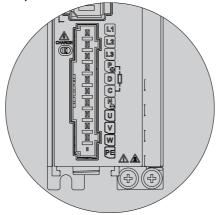


Figure 3-9 Pin assignment of main circuit terminal of servo drives in size B

No.	Name	Description
1	L1, L2, L3 (power input terminals)	See the nameplate for the rated voltage class. Note: S5R5 (750 W) models support single-phase 220 V input only, with a 220 V power supply connected between terminals L1 and L2.
	P⊕, N⊖ (DC bus terminals)	Used by the common DC bus for multiple servo drives. Contact Inovance for technical support.
2	P⊕, D, C Terminals for connecting external braking resistor	Remove the jumper bar between terminals P⊕ and C before connecting an external braking resistor between terminals P⊕ and D. When an external braking resistor is needed, connect it between terminals P and C. If an external braking resistor is not needed, short terminals P and D. Size A models are not equipped with built-in braking resistor or jumper bar between terminals P and D.
3	U, V, W (terminals for connecting the servo motor)	Connected to U, V, and W phases of the servo motor.
4	Motor grounding terminal	Connected to the grounding terminal of the motor for grounding purpose.

### Rated power (size C/D: 1.0 kW to 3.0 kW): SV660NS7R6I, SV660NS012I

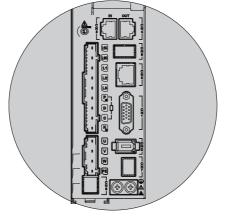


Figure 3-10 Pin assignment of main circuit terminal of servo drives in size C and D (220 V)

No.	Name	Description
1	L1C, L2C Control circuit power input terminals	See the nameplate for the rated voltage class.
2	L1, L2, L3 Main circuit power input terminals	See the nameplate for the rated voltage class. Note: The drive supports single-phase/three-phase 220 V input, with the 220 V power supply connected between L1 and L2.
	P⊕, N⊖ (DC bus terminals)	Used by the common DC bus for multiple servo drives. Contact Inovance for technical support.
3	P⊕, D, C Terminals for connecting external braking resistor	Remove the jumper bar between terminals P⊕ and C before connecting an external braking resistor between terminals P⊕ and D. When an external braking resistor is needed, connect it between terminals P and C. If an external braking resistor is not needed, short terminals P and D. Size A models are not equipped with built-in braking resistor or jumper bar between terminals P and D.
4	U, V, W (terminals for connecting the servo motor)	Connected to U, V, and W phases of the servo motor.
5	Motor grounding terminal	Connected to the grounding terminal of the motor for grounding purpose.

Table 3–13 Description of main circuit terminal pins of servo drives in size C and D (220 V)

# Rated power (size C/D: 1.0 kW to 3.0 kW): SV660NT3R5I, SV660NT5R4I, SV660NT012I

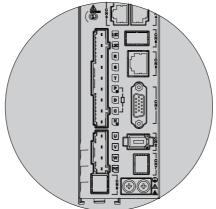


Figure 3-11 Pin assignment of main circuit terminal of servo drives in size C and D (380 V)

No.	Name	Description
1	L1C, L2C Control circuit power input terminals	See the nameplate for the rated voltage class.
2	R, S, T Main circuit power input terminals	See the nameplate for the rated voltage class.
	P⊕, N⊖ (DC bus terminals)	Used by the common DC bus for multiple servo drives. Contact Inovance for technical support.
3	P⊕, D, C Terminals for connecting external braking resistor	Remove the jumper bar between terminals P⊕ and C before connecting an external braking resistor between terminals P⊕ and D. When an external braking resistor is needed, connect it between terminals P and C. If an external braking resistor is not needed, short terminals P and D. Size A models are not equipped with built-in braking resistor or jumper bar between terminals P and D.
4	U, V, W (terminals for connecting the servo motor)	Connected to U, V, and W phases of the servo motor.
5	Motor grounding terminal	Connected to the grounding terminal of the motor for grounding purpose.

# Size E (rated power: 5.0 kW to 7.5 kW): SV660NT017I, SV660NT021I, and SV660NT026I

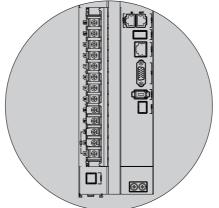


Figure 3-12 Pin assignment of main circuit terminal of servo drives in size E

No.	Name	Description
1	L1C, L2C Control circuit power input terminals	See the nameplate for the rated voltage class.
2	R, S, T Main circuit power input terminals	See the nameplate for the rated voltage class.
3	U, V, W (terminals for connecting the servo motor)	Connected to U, V, and W phases of the servo motor.
4	N2, N1 Terminals for connecting external reactor	Terminals N1 and N2 are jumpered by default. To suppress harmonics in the power supply, remove the jumper between terminals N1 and N2 first and connect an external DC reactor between terminals N1 and N2.
5	P⊕, D, C Terminals for connecting external braking resistor	Remove the jumper bar between terminals P⊕ and C before connecting an external braking resistor between terminals P⊕ and D. When an external braking resistor is needed, connect it between terminals P and C. If an external braking resistor is not needed, short terminals P and D. Size A models are not equipped with built-in braking resistor or jumper bar between terminals P and D.

## 3.3.5 Connecting the Motor (UVW)

Keep the lead wire of the motor cable shield as short as possible, with its width (b in the following figure) not shorter than 1/5 of its length (a in the following figure).




Figure 3-13 Lead-out of the motor cable shield

• The following figure shows the wiring diagram for a terminal-type motor.

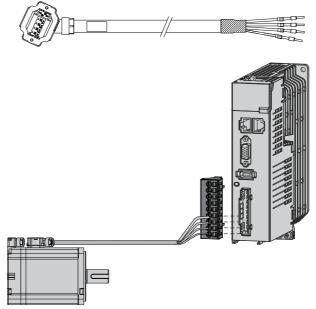



Figure 3-14 Wiring between the servo drive and terminal-type motor

Flange Size <sup>[1]</sup>	Outline Drawing of the		Terminal Pin Layout		
Trange Size	Connector		Pin No.	Signal Name	Color
Terminal-	4	5 6	1	PE	Yellow/ Green
type: 40 60 80		2	W	Red	
			3	V	Black
		4	U	White	
		5	Brake (polarity	Brown	
	Black 6-pin c	onnector	6	insensitive)	Blue

Table 3-16 Description of the power cable connector (motor side) for terminal-type motors

# Note

- [1] The flange size refers to the width of the mounting flange.
- Power cable colors are subject to the actual product. All cable colors mentioned in this guide refer to Inovance cable colors.
- The connection diagram for a flying leads type motor is shown in the following figure.

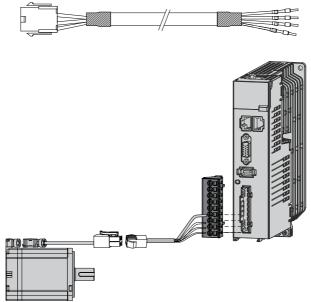



Flange Size <sup>[1]</sup>	Outline Drawing of the		Terminal Pin Layout		
Trange Size	Connector		Pin No.	Signal Name	Color
			1	U	White
Reco housi		• 4 • 1       • 5 • 2       • 6 • 3	2	V	Black
			4	W	Red
			5	PE	Yellow/ Green
			3		Brown
	Black 6-pin connector Recommendation: Plastic housing: MOLEX-50361736 Terminal: MOLEX-3900006		6	Brake (polarity insensitive)	Blue

Table 3-17 Description of the flying leads power cable connector (motor side)

- [1]: The motor flame size indicates the width for installing the flange.
- Power cable colors are subject to the actual product. All cable colors mentioned in this guide refer to Inovance cable colors.
- The following table describes the connector for high-power motor power cables.

Table 3-18 Description of the power cable connector (motor side)

Elango Sizo [1]	Flange Size [1] Outline Drawing of the Connector Pin No		Terminal Pin Layout		
Trange Size ??			Signal Name	Color	
100 130	20-18 connector A H G BO IO OF O D E MIL-DTL-5015 series 3108E20- 18S aviation connector	В	U	Blue	
		I	V	Black	
		F	W	Red	
		G	PE	Yellow/ Green	
		С	Brake	Red	
		E	(polarity insensitive)	Black	

Flange Size <sup>[1]</sup>	Outline Drawing of the	Terminal Pin Layout		
Trange Size	Connector	Pin No.	Signal Name	Color
	(	А	U	Blue
	20-22 connector 20-22 connector Bo C ob MIL-DTL-5015 series 3108E20- 22S military-spec connector	С	V	Black
		E	W	Red
		F	PE	Yellow/ Green
		В	Brake	Red
		D	(polarity insensitive)	Black

Table 3–19 Description of the power	cable connector (motor side)
-------------------------------------	------------------------------

- [1] The flange size refers to the width of the mounting flange.
- Power cable colors are subject to the actual product. All cable colors mentioned in this guide refer to Inovance cable colors.

## 3.3.6 Wiring of External EMC Filter

Install the filter near the input terminals of the drive. The cable between the filter and the drive must be shorter than 30 cm. Connect the grounding terminal of the filter together with the grounding terminal of the drive. Ensure the filter and the drive are installed onto the same conductive mounting surface that is connected to the main grounding of the control cabinet.

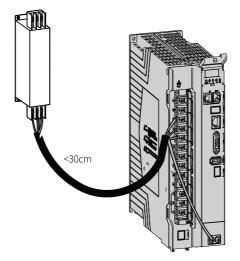


Figure 3-16 Installing the filter

## 3.3.7 Wiring of the Power Supply

• Single-phase 220 V models: SV660NS1R6I, SV660NS2R8I, SV660NS5R5I, SV660NS7R6I and SV660NS012I

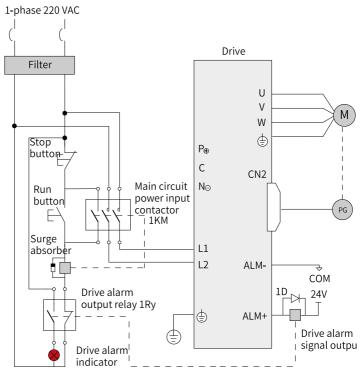


Figure 3-17 Main circuit wiring

- 1KM: Electromagnetic contactor; 1Ry: Relay; 1D: Flywheel diode
- DO is set as alarm output (ALM+/-). When the servo drive alarms, the power supply will be cut off automatically. SV660NS1R6I and SV660NS2R8I are not configured with built-in regenerative resistors, if the regenerative resistor is needed, connect an external regenerative resistor between P⊕ and C.
- Three-phase 220 V models: SV660NS7R6I, SV660NS012I

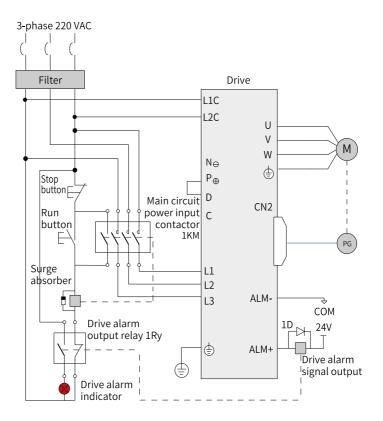


Figure 3-18 Main circuit wiring of three-phase 220 V models

- 1KM: Electromagnetic contactor; 1Ry: Relay; 1D: Flywheel diode
- The DO is set as alarm output (ALM+/-). When the servo drive alarms, the power supply is cut off automatically and the alarm indicator lights up.
- Three-phase 380 V models: SV660NT3R5I, SV660NT5R4I, SV660NT8R4I, SV660NT012I, SV660NT021I, SV660NT026I


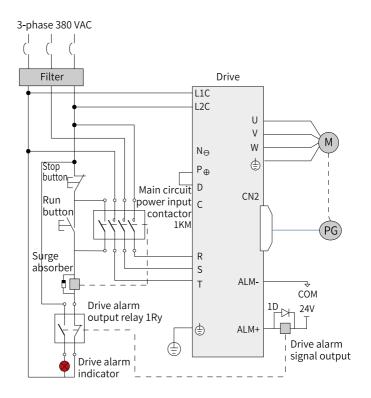


Figure 3-19 Main circuit wiring of three-phase 380 V models

- 1KM: Electromagnetic contactor; 1Ry: Relay; 1D: Flywheel diode
- The DO is set as alarm output (ALM+/-). When the servo drive alarms, the power supply is cut off automatically and the alarm indicator lights up.

### 3.3.8 Grounding and Wiring

Observe the following requirements to ensure a proper grounding of the servo drive.



- To prevent electric shocks, ground the grounding terminal properly. Observe related national or regional regulations during grounding.
- To prevent electric shocks, ensure the protective grounding conductor complies with technical specifications and local safety standards. Keep the length of the grounding cable as short as possible. As the leakage current of the equipment may exceed 3.5 mA, it is recommended to use a copper protective grounding conductor with a cross-sectional area of at least 10 mm<sup>2</sup>, or use two protective grounding conductors with the same specification.
- The dimensions of the grounding cable must comply with the electrical device technical standards. Keep the length of the grounding cable as short as possible. Failure to comply will lead to unstable potential in the grounding terminals away from the grounding point due to leakage current, resulting in an electric shock.



- For use of multiple servo drives, observe all the grounding instructions for the drive. Improper grounding of the device will lead to malfunction of the drive and the device.
- Do not share the same grounding cable with other devices (such as welding machines or high-current electrical devices). Improper grounding of the device will lead to drive or device faults caused by electrical interference.
- For use of multiple servo drives, observe all the grounding instructions for the drive. Improper grounding of the device will lead to malfunction of the drive and the device.
- For drives equipped with optional VDR and insulation resistor grounding screws, remove the grounding screw before voltage resistance test. Failure to comply may cause the drive to fail the test.

#### **Grounding requirements**

Observe the following requirements to ensure a proper grounding of the drive.

- The protective grounding conductor must be a yellow/green cable comprised of copper conductors. Do not connect the protective grounding conductor to a switching device (such as a circuit breaker) in serial.
- Ground the grounding terminal properly. Improper grounding will lead to device malfunction or damage.
- Do not connect the grounding terminal to the N terminal of the neutral wire of the power supply.

- It is recommended to install the drive to a conductive metal surface. Ensure the whole conductive bottom of the drive is connected properly to the mounting face.
- Tighten the grounding screw with specified tightening torque to prevent the protective grounding conductor from being secured improperly.

### Single-drive grounding

Installation of an individual drive:

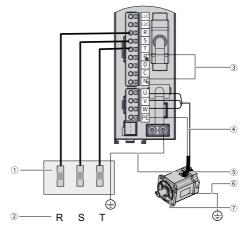


Table 3–20 Single-drive grounding

No.	Description
1)	Input protection (fuse or circuit breaker) Connect the lower end of the fuse to the filter.
2	Input power supply
3	Do not ground the DC bus terminal or the regenerative resistor terminal.
(4)	Connect the output PE terminal of the servo drive to the motor output cable shield.
(5)	Connect the PE cable on the input power supply side to the input PE terminal of the servo drive.
6	Ground the motor enclosure.
$\overline{O}$	Three-phase motor

# Note

The main circuit terminal layout varies with different models and is subject to the physical product.

#### **Multi-drive grounding**

Side-by-side installation of multiple drives:

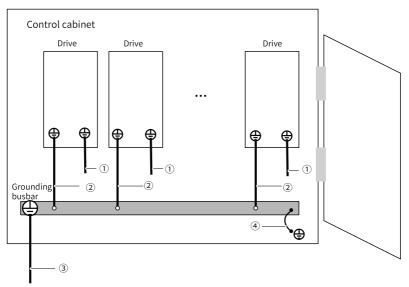


Table 3-21 Description for grounding of multiple drives installed side by side

No.	Description
1	Connect the motor output cable shield to the output PE terminal of the servo drive.
2	Connect the main circuit input PE terminal of the servo drive to the grounding copper busbar of the control cabinet through a protective grounding conductor.
3	Connect the PE cable on the input power supply side to the grounding copper busbar of the control cabinet.
(4)	Connect the grounding copper busbar of the control cabinet to the metal enclosure of the control cabinet through the protective grounding conductor.

#### Grounding the control cabinet system

The most cost-effective method of suppressing interference in a control cabinet is to isolate the interference source from devices that may be interfered with. Divide the control cabinet into multiple EMC compartments or use multiple control cabinets based on the intensity of interference sources, and install each device in accordance with the following wiring principles.

No.	Wiring requirements
1	Place the control unit and the drive unit in two separate control cabinets.
2	If multiple control cabinets are used, connect the control cabinets by using a PE cable with a cross-sectional area of at least 16 mm <sup>2</sup> for equipotentiality between the control cabinets.
3	If only one control cabinet is used, place different devices in different compartments of the control cabinet based on signal intensity.
4	Apply equipotential bonding to devices in different compartments inside the control cabinet.
5	Shield all communication (such as RS485) and signal cables drawn from the control cabinet.
6	Place the power input filter in a position near the input interface of the control cabinet.
7	Apply spray coating to each grounding point in the control cabinet.

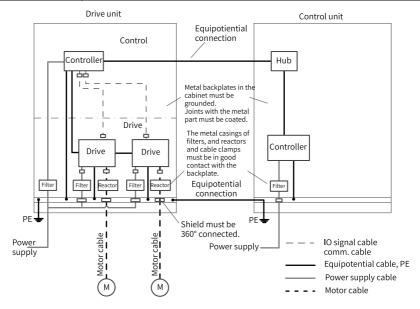


Figure 3-20 Recommended wiring for the control cabinet system

# 3.4 Control Terminal (CN1)

Observe the requirements in standard EN 60204-1 during connecting control circuit cables.

### I/O signal cable selection

It is recommended to use shielded signal cables to prevent I/O signal circuit from being disturbed by external noise. Use separate shielded cables for different analog signals. It is recommended to use shielded twisted pairs for digital signals.




Figure 3-21 Diagram of shielded twisted pairs

#### **Control Cable Specifications**

Table 3-23 Recommended Control Cable Specifications

Control terminal	Connector Kit/Material No.	AWG
CN1	DB15	24 to 30
CN6	15120648	24 to 20

## Note

The CN6 terminal is only applicable to customized models (-FS).

### I/O signal layout

I/O signals include DI/DO signals and relay output signals.

Observe the following requirement during control circuit wiring:

Route the control circuit cables and main circuit cables or other power cables through different routes with a distance of at least 30 cm. Failure to comply may result in disturbed I/O signals.

## 3.4.1 Terminal Layout

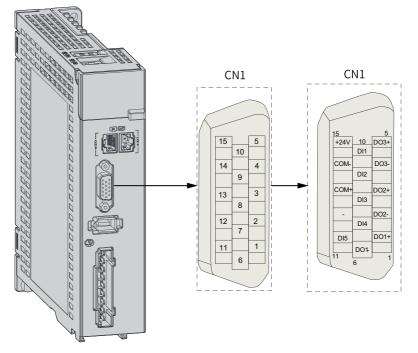


Figure 3-22 Control terminal pin layout of servo drives in sizes A and B

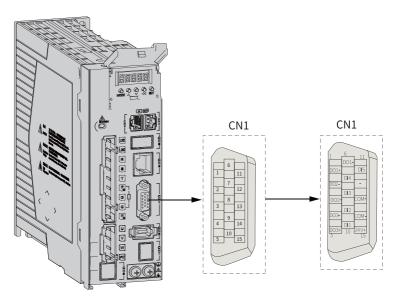


Figure 3-23 Control terminal pin layout of servo drives in sizes C, D and E

Use shielded cables as signal cables, with both ends of the shielded cable grounded.

Si	ignal Default		Pin No.	Description
		function		
	DI1	P-OT	10	Positive limit switch
	DI2	N-OT	9	Negative limit switch
	DI3	HomeSwitch	8	Home switch
	DI4	TouchProbe2	7	Touch probe 2
	DI5	TouchProbe1	11	Touch probe 1
	+24V		15 Internal 24 V power supply: 20 to 28 V	Internal 24 V power supply: 20 to 28 V;
General	eral COM-		14	maximum output current: 200 mA
	COM+		13	Common terminal of DI terminals.
	DO1+	S-RDY+	1	Ready to switch on
	DO1-	S-RDY-	6	Ready to switch on
	DO2+	ALM+	3	Fault
	DO2-	ALM-	2	Fault
1	DO3+	BK+	5	Brake
	DO3-	BK-	4	Diake

Table 3–24 Description of DI/DO signals


DI logic level: "0" < 3 V; "1" > 20 V.

## 3.4.2 DI/DO Signals


#### **DI circuit**

The circuits for DI1 to DI5 are the same. The following takes the DI1 circuit as an example.


- The host controller provides relay output:
  - When you use the internal 24 V power supply:

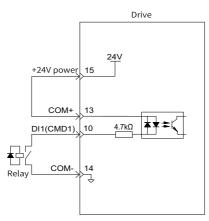


• When you use an external power supply:

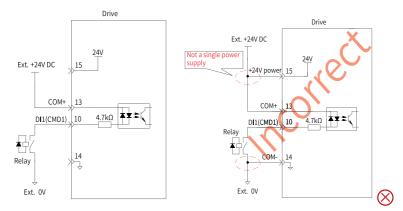

- The host controller provides open-collector output.
  - When you use the internal 24 V power supply:

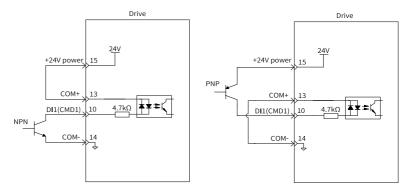

• When you use an external power supply:

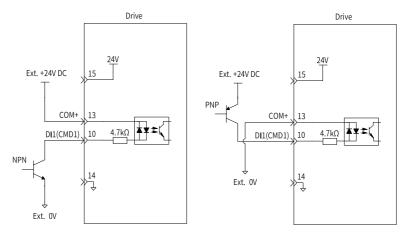


## Note

PNP and NPN input cannot be applied in the same circuit.


### DO circuit

The circuits for DO1 to DO3 are the same. The following description takes DO1 circuit as an example.


• The host controller provides relay input.

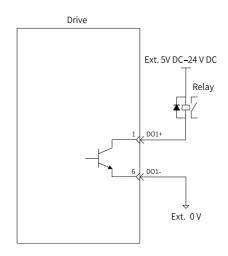

When the host controller provides relay input, a flywheeling diode must be installed. Otherwise, the DO may be damaged.

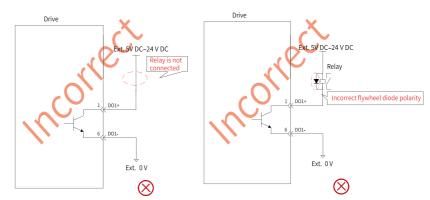

• The host controller provides optocoupler input.

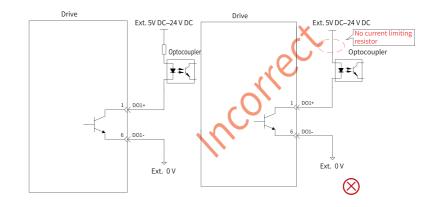

The maximum permissible voltage and current capacity of the optocoupler output circuit inside the servo drive are as follows:

- Max. voltage: 30 VDC
- Max. current: DC 50 mA

### 3.4.3 Wiring of the Brake

The brake is used to prevent the motor shaft from moving and lock the position of the motor and the motion part when the drive is in the non-operational status.




Figure 3-24 Application of the brake



- Use the built-in brake for position-lock purpose only. Do not use this brake for any other purposes (such as braking) other than position-lock in the stop state.
- The brake coil has no polarity.
- Switch off the S-ON signal after the motor stops.
- When the motor with brake runs, the brake may generate a click sound, which does not affect its function.
- When brake coils are energized (the brake is released), flux leakage may occur on the shaft end. Pay special attention when using magnetic sensors around the motor.

The brake input signal of the brake is polarity-insensitive. Prepare a 24 V power supply. The following figure shows the standard wiring of the brake signals (BK) and the brake power supply.

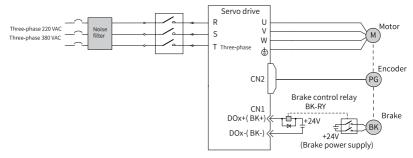


Figure 3-25 Wiring of the brake

#### Pay attention to the following precautions during wiring:

When determining the length of the motor brake cable, take the voltage drop caused by cable resistance into account. The input voltage must be at least 21.6 V to enable the brake to work properly. The following table lists brake specifications of Inovance MS1 series servo motors.


Motor model	Holding torque (N∙m)	Supply voltage (VDC) ±10%	Coil resistance (Ω) (±7%)	Exciting current (A)	Release time (ms)	Apply time (ms)	Backlash (°)
MS1H1-05B/10B MS1H4-10B	0.32		94.4	0.25	≤ 20	≤ 40	≤ 1.5
MS1H1-20B/40B MS1H4-20B/40B	1.5	24	75.79	0.32	≤ 20	≤ 60	≤ 1.5
MS1H1-75B/10C MS1H4-75B/10C	3.2		57.6	0.42	≤ 40	≤ 60	≤1
MS1H2-10C/15C/ 20C/25C	8		32.73	0.73	≤ 40	≤ 100	≤1
MS1H2-30C/40C/ 50C MS1H3-85B/13C/ 18C	16		24	1	≤ 60	≤ 120	≤ 1
MS1H3-29C/44C/ 55C/75C	50		18.58	1.29	≤ 100	≤ 200	≤1

Table 3–25 Brake specifications

- The brake cannot share the same power supply with other electrical devices. This is to prevent malfunction of the brake due to voltage or current drop caused by other working devices.
- Use cables with a cross-sectional area above 0.5 mm<sup>2</sup>.

# 3.5 Encoder Terminal (CN2)

### 3.5.1 Terminal Layout



Encoder signal terminal CN2

Figure 3-26 Encoder terminal pin layout

No.	Name	Description
1	+5 V	5 V power supply
2	0 V	-
3	Reserved	-
4	Reserved	-
5	PS+	Encoder signal
6	PS-	
Enclosure	PE	Shield

Table 3–26 Description of encoder terminal pins

### 3.5.2 Connecting the Absolute Encoder

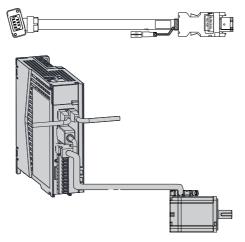


Figure 3-27 Terminal-type signal cable wiring  $^{\left[ 1\right] }$ 

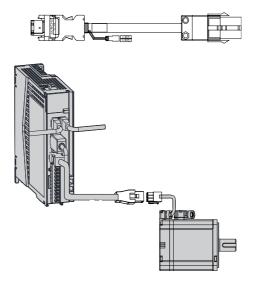


Figure 3-28 Flying leads-type signal cable wiring<sup>[1]</sup>

# Note

- [1] The preceding figure shows the wiring diagram of the absolute encoder cable, which is similar to that of the incremental encoder (without a battery box). The cable for the incremental encoder needs to be purchased separately.
- The encoder cable color is subject to the color of the actual product. Cable colors mentioned in this guide all refer to Inovance cables.

Lead wires of the battery box:

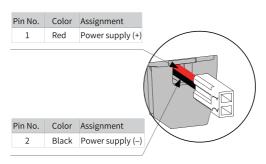


Figure 3-29 Description of the lead wire color of the battery box

- Keep the battery in environments within the required ambient temperature range and ensure the battery is in reliable contact and carries sufficient power capacity. Otherwise, encoder data loss may occur.
- Model of the battery box (battery included): S6-C4A

Applica			Terminal Pin Layout			
ble Motor Flange Size <sup>[1]</sup>	Outli	ine Drawing of the Connector	Pin No.	Signal Name	Color	Туре
			1	+5 V	Red	Twisted
	Ser		2	GND	Orange	pair
	vo		5	PS+	Blue	Twisted
	dri ve		6	PS-	Purple	pair
Terminal- type:	ninal-	6-pin male	Enclosure	PE	-	-
40			1	PS+	Blue	Twisted
60 80			2	PS-	Purple	pair
00	Мо		3	DC+	Brown	Twisted
	tor		4	DC-	Black	pair
sid			5	+5 V	Red	Twisted
	е		6	GND	Orange	pair
		7-pin connector	7	PE	-	-

[1]: The motor frame size indicates the width for installing the flange.

Applica	Outline Drawing of the Connector				Terminal P	in Layout	
ble Motor Flange Size <sup>[1]</sup>				Pin No.	Signal Name	Color	Туре
		~		1	+5 V	Red	Twisted
		Se rv		2	GND	Orange	pair
		0		5	PS+	Blue	Twisted
		dri		6	PS-	Purple	pair
Flying leads	Encoder cable	ve sid e 6-pin	6-pin male	Enclo sure	PE	-	-
type: 40 60	Connector To the drive CN2			1	Battery (+)	Brown	Twisted
80		М	View direction	4	Battery (-)	Black	pair
		ot		3	PS+	Blue	Twisted
		or sid	9-pin connector Recommended: Plastic	6	PS-	Purple	pair
		e	enclosure: AMP 172161-	9	+5 V	Red	Twisted
			1;	8	GND	Orange	pair
			terminal: AMP 770835-1	7	Shield	-	-

Table 3-28 Flying leads type motor encoder cable connector (9-pin)

[1]: The motor frame size indicates the width for installing the flange.

Applica					Terminal Pin	Layout	
ble Motor Flange Size <sup>[1]</sup>	Outline Drawing of the Connector			Pin No.	Signal Name	Color	Туре
		~		1	+5 V	Red	Twisted
		Se rv		2	GND	Orange	pair
		0		5	PS+	Blue	Twisted
		dri		6	PS-	Purple	pair
100	100 Encoder cable connector 130 To the connector	ve sid e	6-pin male	Enclo sure	PE	-	-
130 180		o the connector		А	PS+	Blue	Twisted
100				В	PS-	Purple	pair
			20-29 Connector	E	Battery (+)	Brown	Twisted
			View direction	F	Battery (-)	Black	pair
				G	+5 V	Red	Twisted
				Н	GND	Orange	pair
				J	Shield	-	-

Table 3–29 Absolute encoder cable connector (MIL-DTL-5015 series 3108E20-29S aviation connector)

[1]: The motor frame size indicates the width for installing the flange.

### 3.5.3 Installing Absolute Encoder Battery Box

The optional S6-C4A battery box contains the following items:

- One plastic case.
- One battery (3.6 V, 2,600 mAh).
- Terminal block and crimping terminal.

### Installing the battery box


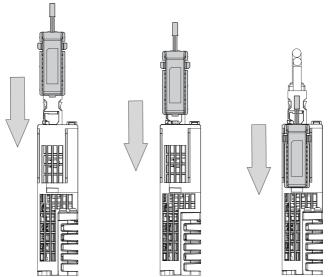


Figure 3-30 Installing the battery box (bottom view)

#### Removing the battery box

The battery may generate leakage liquid after long-term use. Replace it every two years. Remove the battery box in steps shown in the preceding figure, but in the reverse order.

When closing the battery box cover, prevent the connector cable from being pinched.

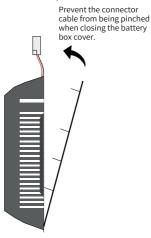

Improper use of the battery may result in liquid leakage which corrodes the components or leads to battery explosion. Observe the following precautions during use:



- Insert the battery with polarity (+/-) placed correctly.
- Leaving an idled or retired battery inside the device may lead to electrolyte leakage. The electrolyte inside the battery is highly corrosive, not only corroding surrounding components but also incurring the risk of short circuit. It is recommended to replace the battery every 2 years.
- Do not disassemble the battery because the internal electrolyte may spread out and result in personal injury.
- Do not throw a battery into the fire. Failure to comply may result in an explosion.
- Do not short-circuit the battery or strip off the battery case. Prevent terminals (+) and (-) of the battery from coming into contact with the metal. Contact with the metal can result in a high current, not only weakening the battery power, but also incurring the risk of explosion due to severe heating.
- This battery is not rechargeable.
- Dispose of the retired battery according to local regulations.

### 3.5.4 Encoder Cable Specifications

- Ground the shielded layers on both the servo drive side and the motor side. Otherwise, the servo drive will report a false alarm.
- Do not connect cables to the "reserved" terminals.
- Given the voltage drop caused by cable resistance and signal attenuation caused by distributed capacitance, it is recommended to use twisted-pair cables of 26AWG or above (as per UL2464 standard) with length no longer than 10 m as the encoder cable.

# Note

It is recommended to use 22AWG to 26AWG cables and a matching terminal AMP170359-1 for 10B, 20B, 40B, and 75B series motors. If a longer cable is required, increase the cable diameter properly. See *"Table 3–30 Recommended cables" on page 80* for details.

Cable Size	Cable Size (mm <sup>2</sup> )	Ω/km	Allowable Length (m)	OD (mm)
3P×26AWG	0.13	143	10.0	6.0±0.2
3P×25AWG	0.16	89.4	16.0	6.2±0.2
3P×24AWG	0.2	79.6	18.0	6.5±0.2
3P×23AWG	0.26	68.5	20.9	6.8±0.2
3P×22AWG	0.32	54.3	26.4	7.0±0.2
3P×21AWG	0.41	42.7	33.5	7.3±0.2
3P×20AWG	0.52	33.9	42.2	7.6±0.3
3P×19AWG	0.57	26.9	53.2	8.5±0.3
3P×18AWG	0.81	21.4	66.8	8.8±0.3
3P×17AWG	1.03	16.3	87.7	9.7±0.3
3P×16AWG	1.31	13.5	105.0	11.4±0.3

Table 3–30 Recommended cables

If the cables of above 16AWG are required, contact the sales personnel of Inovance.

# 3.6 Communication Terminals (CN3 and CN4)

### **Terminal layout**

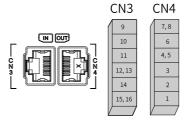


Figure 3-31 Communication terminal pin layout (sizes A and B)

Table 3–31 EtherCAT	communication	terminal pin	assignment	(sizes A and B)
Tuble 0 01 Ethero/th	communication	cerimitat pini	assignment	(Sizes / and b)

Pin No.	Name	Description
9	TD+	Transmitting data (+)
10	TD-	Transmitting data (-)
11	RD+	Receiving data (+)
12 and 13	-	-
14	RD-	Receiving data (-)

Pin No.	Name	Description
15 and 16	-	-
1	TD+	Transmitting data (+)
2	TD-	Transmitting data (-)
3	RD+	Receiving data (+)
4 and 5	-	-
6	RD-	Receiving data (-)
7 and 8	-	-


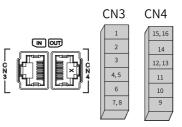


Figure 3-32 Communication terminal pin layout (sizes C, D and E)

Pin No.	Name	Description
1	TD+	Transmitting data (+)
2	TD-	Transmitting data (-)
3	RD+	Receiving data (+)
4 and 5	-	-
6	RD-	Receiving data (-)
7 and 8	-	-
9	TD+	Transmitting data (+)
10	TD-	Transmitting data (-)
11	RD+	Receiving data (+)
12 and 13	-	-
14	RD-	Receiving data (-)
15 and 16	-	-

#### **Terminal description**

CN3 and CN4 are EtherCAT connectors. Connect CN3 (IN) to the communication port of the master and CN4 (OUT) to the next slave. For assignment of CN3/CN4 terminal pins, see " *Communication Terminals CN3 and CN4*" on page 80

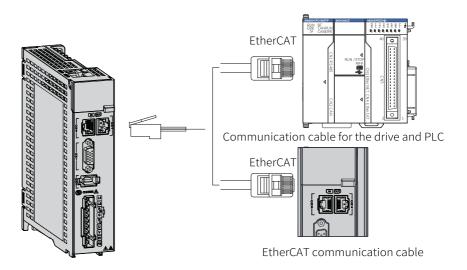



### **Terminal connection**

• Topology

The communication topology of EtherCAT is flexible without any limit. The SV660N series servo drive carries IN and OUT ports.


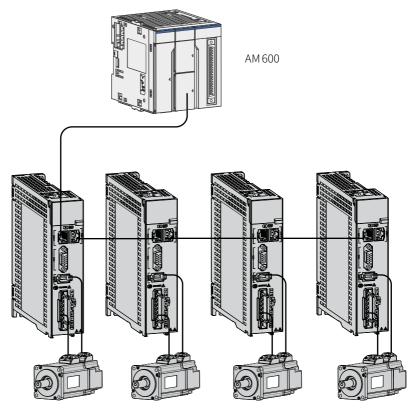


Figure 3-34 Communication network topology

Linear topology

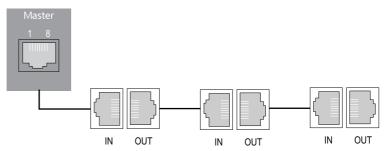

### **Communication cable selection**

The EtherCAT communication cable must be Ethernet Category 5 (100BASE-TX) network cable or high-strength shielded network cable. The cables used for the servo

drive must also be network cable, with length shorter than 100 m. The shielded network cable enhances the anti-interference capacity of the system.

#### **EMC standards**

This servo drive complies with the latest international EMC standard: IEC 618003:2004/A1:2011 (Adjustable speed electrical power drive systems—part 3: EMC requirements and specific test methods

#### Interface information

EtherCAT cables are connected to the network ports (IN and OUT) equipped with metal shield. The electrical characteristics comply with standards IEEE 802.3 and ISO 8877.

Cable Length	Price	Supplier
0.2 m to 10 m	See "Table 3–34 Information for ordering the communication cable" on page 84"Cable Ordering" .	
More than 10 m	The cable price is added by RMB 5 for every additional 1 m based on the price of S6-L- T04-10.0. The cable price is also related to the magnitude of the order.	Inovance, Haituo and others


# Note

Cable selection is subject to the instructions provided by the cable supplier. See "Instructions for purchasing servo encoder cables/power cables" in Inovance business system.

#### Table 3–34 Information for ordering the communication cable

Material code	Cable model	Length (m)
15040261	S6-L-T04-0.3	0.3
15040262	S6-L-T04-3.0	3.0
15041960	S6-L-T04-0.2	0.2
15041961	S6-L-T04-0.5	0.5
15041962	S6-L-T04-1.0	1.0
15041963	S6-L-T04-2.0	2.0
15041964	S6-L-T04-5.0	5.0
15041965	S6-L-T04-10.0	10.0

Cables are ordered from suppliers including Haituo (the cable price is added by RMB 5 for every additional 1 m based on the price of S6-L-T04-10.0. The cable price is also related to the magnitude of the order). The order quantity will also affect the pricing.





### Note

The head of the dual-port network terminal cannot be too thick, otherwise, interference may occur. The recommended thickness is 2.4 mm. See *"Figure 3–35 Network port connector" on page 85*.

Item	Detailed Description
UL Certification	Compliant with UL certification
Cat.5e cable	Cat.5e cable
Double shield	Braided shield (coverage: 85%), aluminum foil shield (coverage: 100%)
Environmental worthiness	Ambient temperature: -30°C to +60°C, resistant to industrial oil, corrosive acid and alkali
EMC test standard	GB/T 24808-2009

# 3.7 Communication Terminal (CN5)

### **Terminal layout**




Figure 3-36 Layout of terminals

#### Table 3–36 Pin assignment

Pin No.	Definition
1–5	-
6	RS232-TXD
7	RS232-RXD
8	GND

### Description

You can connect the servo drive to PC with a PC communication cable through the CN5 terminal. The outline drawing of the cable is shown in the following figure.



Figure 3-37 PC communication cable

RJ45 on the drive side (A)		DB9 on the PC side (B)	
Signal	Pin No.	Signal	Pin No.
RS232-TXD	6	PC-RXD	2
RS232-RXD	7	PC-TXD	3
GND	8	GND	5
PE (shield)	Enclosure	PE (shield)	Enclosure

Pin assignment of DB9 terminal on the PC side is shown in the following table.

Pin No.	Assignment	Description	Pin layout
2	PC-RXD	PC receiving end	
3	PC-TXD	PC transmitting end	
5	GND	Ground	
Enclosure	PE	Shield	

Table 3–38 Pin assignment of DB9 terminal on the PC side

If the host controller supports USB interface only, use the serial-to-USB cable.

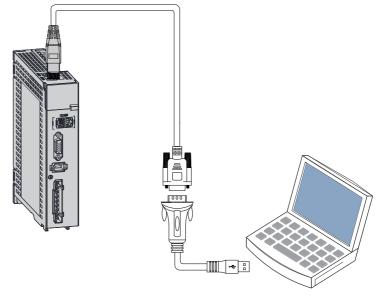


Figure 3-38 Serial-to-USB conversion

Recommendations: Manufacture: Z-TEK Model: ZE551A, equipped with a 0.8 m USB extension cable Chip model: FT232

# 3.8 STO Safety Terminal (CN6)

### Note

The CN6 STO safety function terminal is only suitable for non-standard models (-FS).

### **Terminal layout**

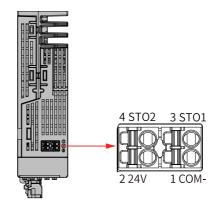


Table 3–39 Pin assignment of STO safety terminal

Pin No.	Assignment	Description
1	COM-	STO reference GND
2	24V	Internal 24 V power supply
3	STO1	Control input of STO1
4	STO2	Control input of STO2

Two isolated inputs are configured to dual-channel inputs of the STO function: STO1/STO2.

To facilitate commissioning, additional pin with supply voltage (+24V) is integrated. The bridging of the 24 V terminal to STO1/STO2 is needed in case the safety circuit is installed but no STO function is needed.

#### Description

#### • Electrical specifications and connection of the input circuit

This section describes the characteristics of the input signals assigned to the CN6 connectors.

Specifications


The servo drive operates normally only when the input states of STO1 and STO2 are both "High" ("1" or "H").

The servo drive does not operate when the input states of STO1 or STO2 are different or are both "Low" ("0" or "L").


Electrical characteristics of Safety Request Input Signal are as follows:

Item	Characteristics	Description
Voltage range	24 VDC (±15%)	-
Input current	3.6 mA (Typ.)	This is the value per channel.
Standards of logic levels	"0" < 5 V, "1" > 15 V	-
Digital input impedance	5.4 kΩ	-

Wiring example for an external 24 V

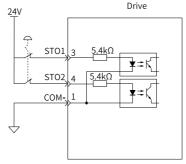


Wiring example for an internal 24 V

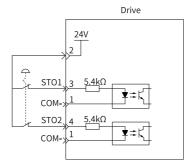

#### EMC requirements

- To avoid short circuit between two adjacent conductors, either use cable with shield connected to the protective bonding circuit on each separate conductor, or use flat cables with one earthed conductor between each signal conductor.
- Double-shielded or single-shielded twisted multi-pair cable is strongly recommended.
- Fix and ground the cable shield using a piece of conductive metal. Example of cable clamp:



- The maximum allowable cable length between the drive and the safety switch is 30 m.
- Other requirements
  - All wiring must be well protected, routed and clamped where practicable.
  - It must be assured that there is no pulling or pinching on the cable when installing.
  - Route the two STO DI channels through different routes to prevent possible fault. If impossible, protect the cable with double shields.

Cables	Description
Category	Low voltage, double-shielded or single-shielded twisted multi-pair cable
Maximum size	0.8 mm <sup>2</sup> (18AWG)
Minimum size	0.8 mm <sup>2</sup> (28AWG)
Maximum length	The maximum length between the STO input terminal and the operation contact is 30 m.

#### Applicable servo drives

The STO function applies to the following servo drives (-FS models):

Size	Power range	Structure	W x H x D (mm <sup>3</sup> )
А	0.2 kW to 0.4 kW	Integrated structure	40 x 170 x 150
В	0.75 kW	Integrated structure	50 x 170 x 173
С	1 kW to 1.5 kW	Split-type structure	55 x 170 x 173
D	1.5 kW to 3 kW	Split-type structure	80 x 170 x 183
E	5 kW to 7.5 kW	Split-type structure	90 x 250 x 230

# 3.9 Wiring and Setting of the Regenerative Resistor

#### Connecting the regenerative resistor

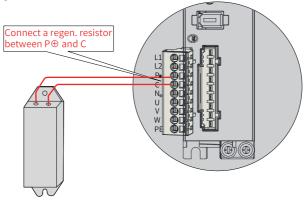


Figure 3-39 Wiring of external regenerative resistor

For cables used for terminals  $P \oplus$  and C, see "3.3.3 Recommended Cable Specifications and Models" on page 41.



Observe the following precautions when connecting the external regenerative resistor:

- Remove the jumper between terminals P⊕ and D before using the external regenerative resistor. Failure to comply will result in overcurrent and damage the braking transistor.
- Do not connect the external regenerative resistor to the positive or negative pole of the bus directly. Failure to comply will damage the servo drive and result in a fire.
- Select a resistor with resistance higher than or equal to the minimum permissible value. Failure to comply will result in Er.201 (Overcurrent) or damage the servo drive.
- Make sure parameters H02.25 (Regenerative resistor setting), H02.26 (Power of external regenerative resistor) and H02.27 (Resistance of external regenerative resistor) are set properly before operating the servo drive.
- Install the external regenerative resistor on an incombustible object such as a metal.
- The built-in regenerative resistor or jumper bar is not available in models S1R6 and S2R8. If an external regenerative resistor is needed for these models, connect it between terminals P $\oplus$  and C.

# 4 Maintenance

### 4.1 Routine Inspection

Standard operating conditions:

Average annual ambient temperature: 30°C Average load rate: < 80% Daily operating time: < 20 h

### 4.1.1 Routine Checklist

Check the following items during routine inspection.

No.	Routine Checklist Chec	
1	The ambient temperature and humidity are normal. There is no dust or unwanted objects in the servo drive.	
2	There is no abnormal vibration or noise.	
3	The voltage of the power supply is normal.	
4	There is no strange smell.	
5	There are no fibers adhered to the air inlet.	
6	There is no intrusion of unwanted object on the load end.	

Table 4–1 Routine che	ecklist
-----------------------	---------

### 4.1.2 Routine Cleaning List

Check the following items during routine cleaning.

Table 4–2 Routine	cleaning list
-------------------	---------------

No.	Routine Cleaning List	Checked
1	Clean the dust on the equipment surface, especially the metallic dust.	
2	Keep the front end of the servo drive and the connectors clean.	

# Note

- Cut off the power supply before cleaning. Clean the equipment with an air gun or a piece of dry cloth.
- Do not use the gasoline, diluent, alcohol, acidic or alkaline detergent during cleaning to prevent enclosure discoloration or damage.

### 4.2 Regular Maintenance

### 4.2.1 Regular Checklist

No.	Item	Checked
1	The screws used to fix the couplings between devices are in place.	
2	There is no sign of overheating.	
3	Terminal blocks are in good condition without any sign of damage.	
4	The clamping units of terminal blocks are in place.	

Table 4–3 Regular checklist

### 4.2.2 Periodic Maintenance List

The electrical and electronic parts inside the servo drive may be mechanically worn out and degraded. To keep the servo drive and servo motor in good condition, perform parts replacement based on the replacement cycles listed in the following table. Contact Inovance or Inovance agent before replacement to double check whether the part needs to be replaced.

Equipment	Components	Standard Replacement Interval	Remarks	
	Bus filter capacitor	About five years		
	Cooling fan	2 to 3 years (10000 h to 30000 h)		
	Aluminum electrolytic capacitor on the PCB	About five years		
Servo drive	Pre-charge relay	100,000 operations (depending on the operating conditions)	The standard	
	Pre-charge resistor	20,000 operations (depending on the operating conditions)	replacement interval is for reference only. If any device/	
	Bearing	3 to 5 years (20,000 h to 30,000 h)	component works improperly within the replacement interval,	
	Oil seal	5000 h	replace it immediately.	
	Encoder	3 to 5 years (20,000 h to 30,000 h)		
Motor	Absolute encoder battery	Depends on the operating condition. See the operation instructions for the encoder battery for details.		

### 4.3 Replacing Components

### 4.3.1 Replacing the Motor Flat Key




- Observe all the requirements presented in this chapter. Failure to comply may result in equipment fault or damage.
- Violent disassembly is not allowed. Take enough care during disassembly to prevent personal injury.

Standard MS1 series motors in flange sizes 60, 80, and 130 adopt C-type flat key that carries the disassembly hole. To disassemble the flat key, select a proper disassembly bolt (inner hexagon bolt recommended) based on the following table.

	Specification of the key disassembly bolt				
Motor Size	Dimensions of the Flat	Specifications of the Disassembly			
MOTOL SIZE	Кеу	Bolt (Inner Hexagon Bolt)			
Size 40	Type-A flat key—A3×3×14	No disassembly hole			
Size 60	Type-C flat key—C5×5×16.5	M3 x 10 and above			
Size 80	Type-C flat key—C6×6×25	M3 x 15 and above			
Size 100	Type-C flat key—C8×7×35	M3 x 20 and above			
Size 130	Type-C flat key—C8×7×35	M3 x 20 and above			
Size 180	Type-C flat key—C10×8×64	M3 x 20 and above			

- Tool needed: an Allen wrench
- Disassembly procedure:
  - 1. Select a proper disassembly bolt (inner hexagon bolt recommended) based on the motor model.
  - 2. Use an Allen wrench to screw down the screw until the A-A end of the flat key is detached from the keyway, as shown below. See the following figure.



### 4.3.2 Removing the Motor Oil Seal

- Tools needed: a pair of needle-nose pliers, a pair of slip-proof gloves, and a piece of cotton cloth.
- Disassembly procedure:
  - 1. Put the cotton cloth onto the supporting point B to avoid the end cover from being scratched during disassembly.
  - 2. Secure the motor and use the needle-nose pliers to hold point A of the oil seal lip.
  - 3. Pry the oil seal out gradually against the supporting point B.

0

Force direction

(Support point B is at the step of the extension)

(Support point A is at the outer lip of the oil seal)

# 5 Certification and Standards Compliance

Certification	Directive Name		Standard
	EMC directive	2014/30/EU	EN IEC 61800-3
CE certification	LVD directive	2014/35/EU	EN 61800-5-1 EN 60034
	RoHS directive	2011/65/EU	EN 50581
UL/cUL certification	-		UL61800-5-1 C22.2 No.274-17 UL 1004-6 CSA C22.2 No. 100-14

Table 5–1 Compliance list

### Note

产品的CE、UL/cUL认证,符合最新版本指令和标准要求。

# 5.1 CE Certification



Figure 5-1 CE mark

- The CE mark indicates compliance with the Low Voltage Directive (LVD), Electromagnetic Compatibility (EMC), and Restriction of Hazardous Substances (RoHS) directives.
- The CE mark is required for engaging in commercial business (production, importation, and distribution) in Europe.
- The drive complies with LVD, EMC, and RoHS directives and carries the CE mark.
- Machines and devices integrated with this drive must also comply with CE requirements for distribution in Europe.
- The integrator who integrates this drive into other products and attaches CE mark to the final assembly has the responsibility of ensuring compliance with CE certification.

### 5.1.1 Requirement for Compliance with EMC Directive

The SV660P series servo drive, which is applicable to the first environment and second environment, complies with EMC Directive 2014/30/EU and standard EN IEC 61800-3.

As required by EMC Directive 2014/30/EU and standard EN IEC 61800-3, install an EMC filter on the input side of the drive and use shielded cables on the output side. Ensure the filter is grounded properly and the shield of the output cable is grounded 360 degrees.

# Caution

• When applied in the first environment, the drive may generate radio interference. In addition to the CE compliance requirements described in this chapter, take additional measures, if necessary, to prevent the radio interference generated by the drive.

### Introduction to EMC standards

Electromagnetic compatibility (EMC) describes the ability of electrical and electronic devices to work properly in the electromagnetic environment without introducing electromagnetic interferences that disturb the operation of other local devices or systems. In other words, EMC includes two aspects: 1) The electromagnetic interference generated by a device during normal operation cannot exceed a certain limit. 2) The device must have sufficient immunity to the electromagnetic interference in the environment.

EN IEC 61800-3 defines the following two types of environments.

- First environment: Environment that includes domestic premises, and establishments directly connected without intermediate transformers to a lowvoltage power supply network which supplies buildings used for domestic purposes
- Second environment: Environment that includes all establishments other than those directly connected to a low-voltage power supply network which supplies buildings used for domestic purposes

Drives are divided into the following four categories based on the intended application environment.

• Category C1 drive: Power drive system (PDS) with rated voltage less than 1000 V, intended for use in the first environment

- Category C2 drive: PDS with rated voltage less than 1000 V, which is neither a plugin device nor a movable device and, when used in the first environment, is intended to be installed and commissioned only by professionals
- Category C3 drive: PDS with rated voltage less than 1000 V, intended for use in the second environment and not intended for use in the first environment
- Category C4 drive: PDS with rated voltage equal to or above 1000 V, or rated current equal to or above 400 A, or intended for use in complex systems in the second environment

### 5.1.2 Requirements for Compliance with LVD

The drive has been tested in accordance with EN61800-5-1 to determine compliance with LVD. Observe the following requirements to enable machines and devices integrated with this drive to comply with LVD.

#### Installation location

Install the drive in a place with overvoltage category III and pollution degree 1 or 2 as specified by IEC 60664-1.

#### Installation environment

For requirements of the installation environment, see "1.1.2 Installation Environment" on page 16.

### **Protective Requirements of Installation**

The drive must be installed in a fireproof cabinet with doors that provide effective electrical and mechanical protection. The installation must conform to local and regional laws and regulations and relevant IEC standards.

Drives (IP20) intended to be installed inside the cabinet must be installed in a structure that prevents intrusion of unwanted objects from the top and the front.

### Main circuit wiring requirements

For wiring requirements of the main circuit terminals, see SV660N Series Servo Drive Hardware Guide.

### **Requirements of protective devices**

To comply with EN 61800-5-1, install a fuse/circuit breaker on the input side of the drive to prevent accidents caused by short circuit in the internal circuit.

For recommended fuse/circuit breaker models, see Chapter "Optional Parts" in SV660N Series Servo Drive Selection Guide.

### 5.2 UL&cUL Certification



Figure 5-2 UL/cUL marking

The UL/cUL mark commonly applies to products sold in the United States and Canada. Products with UL/cUL mark have been inspected and assessed by the UL organization. To pass UL/cUL certification, main built-in components of electrical products must also be UL certified.

The drive has been tested in accordance with UL 6180051 and CSA C22.2 No. 27417 to determine compliance with UL/cUL standards. Observe the following requirements to enable machines and devices integrated with this drive to comply with UL/cUL standards.

#### **Mounting location**

Install the drive in a place with overvoltage category III and pollution degree 1 or 2 as specified by UL61800–5–1.

#### Ambient temperature

According to the protection level, the ambient temperature must be maintained within the following range:

Ambient temperature for open-type drives: 0°C to 50°C

#### Installation requirements

Installation requirements for open-type drives:

SV660N series servo drives are open-type drives that must be installed in a fireproof cabinet with the enclosure that provides effective electrical and mechanical protection. The installation must conform to local laws and regulations and related NEC requirements.

#### Main circuit wiring requirements



On-site installation of output terminals (such as  $P\oplus$ , C, and N $\Theta$ ) is not allowed.

- Terminals P⊕, C, and NO are used to connect optional parts. Do not connect these terminals to an AC power supply.
- To protect the main circuit, separate and cover the surface that may come into contact with the main circuit.
- The control circuit is the internal safety extra-low voltage (SELV) circuit, which must be insulated and isolated from other circuits. Make sure that the control circuit is connected to the external SELV circuit.
- Prevent foreign matters from entering the wiring part of the terminal block.
- Do not solder the twisted conductors.
- The tightening torque may vary with terminals. Tighten terminal screws with the specified tightening torque. You can use the torque screwdriver, ratchet, or wrench.
- When using an electric screwdriver to tighten terminal screws, set a low speed to prevent damage to the terminal screws.
- Tighten the terminal screws at an angle within 5 degrees. Failure to comply may result in screw damage.

#### **Control circuit wiring requirements**

Observe the requirements in UL508 during wiring.

#### **Cable requirements**

Cable dimensions must be compliant with requirements in NEC (National Electric Code) and CEC (Canadian Electrical Code) Part I and local regulations.

- Use cables with copper conductors.
- The recommended cable for the main circuit is a class 2 600V indoor heat-resistant PVC cable with continuous maximum allowable temperature of 75°C. The following conditions are used as premises:
  - Ambient temperature: < 40°C</li>
  - Normal operating ratings

If the recommended cables for peripheral equipment or options are not suitable for the product, contact Inovance.

#### Terminal cable selection

To comply with UL61800-5-1 and CSA C22.2 No. 274-17, power cables used for SV660 series servo drives must meet the following requirements:

- Compliant with NEC, Table 310-16 of NFPA70.
- Comprised of copper conductors with a rated temperature not lower than 75°C (167°F)
- Compliant with 14AWG or higher.
- With a rated voltage not lower than the rated voltage of the servo drive
- It is recommended to use cables compliant with UL758 Style 2517 and Style 2586 as motor main circuit cables.

#### **Requirements for protective devices**

To comply with UL61800-5-1, install a fuse/circuit breaker on the input side of the drive to prevent accidents caused by short circuit in the internal circuit.

Install sufficient protective devices against short circuit in branch circuits according to applicable regulations and this guide. The drive is applicable to circuits with a rated breaking capacity lower than 5000 A and a maximum voltage of 480 VAC (class 400 V).

### Note

All breaker protective devices must be UL-certified.

For the SV660 drive applied in North America, the recommended protective devices are as follows:

Drive model SV660 series servo drive Size Model Rated input current (A)		Circuit breaker (A)	Bussmann conductor fuse (A)	Recommend ed inverse time lag breaker <sup>[1]</sup> (A)	
		Sing	gle-phase 220 V		
C: A	S1R6	2.3	15	-	40
Size A	S2R8	4.0	15	-	40
Size B	S5R5	7.9	15	-	40
Size C	S7R6	9.6	15	-	100
Size D	S012	12.8	20	-	100
		Thre	ee-phase 220 V		
Size C	S7R6	5.1	15	-	100
Size D	S012	8.0	20	-	100
Three-phase 380 V					
Size C	T3R5	2.4	15	-	100
312e C	T5R4	3.6	15	-	100

Drive model SV660 series servo drive		Circuit bus alson (A)	Bussmann	Recommend ed inverse	
Size	Model	Rated input current (A)	Circuit breaker (A)	conductor fuse (A)	time lag breaker <sup>[1]</sup> (A)
Size D	T8R4	5.6	20	-	100
SIZED	T012	8.0	20	-	100
	T017	12.0	-	40	-
Size E	T021	16.0	-	40	-
	T026	21.0	-	40	-

[1]: It is recommended to use the inverse time circuit breaker for multiple servo drives connected in parallel.

# 6 Solutions To Common EMC Problems

# 6.1 Malfunction of the Residual Current Device (RCD)

If an RCD is needed, select the RCD according to the following requirements:

- The drive may generate DC leakage current in the protective conductor, a B-type RCD therefore must be used.
- The drive may generate high-frequency leakage current during operation. To prevent malfunction of the RCD, install an RCD with tripping current not lower than 100 mA for each servo drive.
- When multiple drives connected in parallel share one RCD, select an RCD with tripping current not lower than 300 mA.
- Recommended RCD manufacturers are Siemens and Schneider.

When malfunction occurs on the RCD, take the following measures.

Symptom	Possible Cause	Measure
	The anti-interference performance of the RCD is weak.	
The RCD trips at	The tripping current of the RCD is too low.	<ul> <li>It is recommended to use Siemens or Schneider RCDs.</li> </ul>
the moment of power-on.	An unbalanced load is connected to the rear end of the RCD.	<ul> <li>It is recommended to use an RCD with a higher tripping current.</li> <li>Move the unbalanced load to the front</li> </ul>
	The capacitance of the front end of the servo drive against the ground is too high.	end of the RCD.
	The anti-interference performance of the RCD is weak.	<ul> <li>It is recommended to use Siemens or Schneider RCDs.</li> <li>It is recommended to use an RCD with</li> </ul>
	The tripping current of the RCD is too low.	<ul><li>a higher tripping current.</li><li>Install a simple filter on the input side</li></ul>
The RCD trips during operation.	An unbalanced load is connected to the rear end of the RCD.	of the servo drive and wind magnetic rings on the LN and RST cables near the RCD, as shown in <i>"Figure 6–1</i>
	The distributed capacitance of the motor cable or motor against the ground is too high.	<ul> <li>Magnetic ring on the input side" on page 105.</li> <li>Reduce the carrier frequency without compromising the performance.</li> <li>Reduce the length of motor cables.</li> </ul>

#### Table 6–1 Measures against leakage current

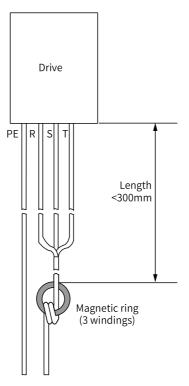


Figure 6-1 Magnetic ring on the input side

### 6.2 Harmonic Suppression

To suppress harmonics and improve the power factor to allow the drive to fulfill the standards, install an AC input reactor on the input side of the drive. For the reactor model and installation mode, see "1.2.2 Instructions for Installing the AC Input Reactor" on page 25.

### 6.3 Control Circuit Interference

### 6.3.1 Common I/O Signal Interference

The drive generates strong interference during operation. Although EMC measures are taken, interference may still exist due to improper wiring or grounding during use. When the drive disturbs or is disturbed by other devices, adopt the following measures.

Step	Measure
1	Use shielded cables as the I/O signal cables and connect the shield to the PE terminal. For details, see " <i>Connecting Control Signals</i> " on page 63.
2	Reliably connect the PE terminal of the motor to the PE terminal of the servo drive, and connect the PE terminal of the servo drive to the PE terminal of the grid.
3	Add an equipotential bonding grounding cable between the host controller and drive (see " <i>Grounding the control cabinet system</i> " on <i>page 62</i> ).
4	Install the magnetic ring on the output side (UVW) of the drive by two to four turns (see "1.2.4 Installation of the Magnetic Ring and Ferrite Clamp" on page 26).
5	Increase the filter capacitance for low-speed DIs. A capacitance up to 0.1 μF is recommended, as shown in <i>"Figure 6–2 I/O signal cables with capacitance increased" on page 106.</i>
6	Increase the filter capacitance between AI and GND. A capacitance up to 0.22 $\mu F$ is recommended.
7	Install a ferrite clamp or wind a magnetic ring on the signal cable by one or two turns. (see "1.2.4 Installation of the Magnetic Ring and Ferrite Clamp" on page 26).
8	Use shielded power cables and ground the shield properly.

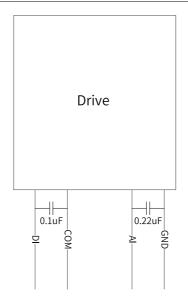


Figure 6-2 I/O signal cables with capacitance increased

### 6.3.2 EtherCAT Communication Interference

Take the measures listed in the following table to suppress interference.

No.	Step
1	The communication cable must be shielded Cat 5e.
2	The communication port is tight and secure without the risk of poor contact.
3	Separate communication cables from power cables with a distance of at least 30 cm.
4	Add an equipotential bonding grounding cable among the nodes during multi-node communication (see " <i>Grounding the</i> <i>control cabinet system</i> " on page 62)
5	The maximum allowable cable length between two nodes is 100 m.
6	Install ferrite clamps on both sides of the communication cable and wind the magnetic ring by one or two turns (see "1.2.4 Installation of the Magnetic Ring and Ferrite Clamp" on page 26).
7	Install the magnetic ring on the output side (UVW) of the drive by two to four turns (see "1.2.4 Installation of the Magnetic Ring and Ferrite Clamp" on page 26).
8	Use shielded power cables and ground the shield properly.



Copyright © Shenzhen Inovance Technology Co., Ltd.

19011432C01

#### Shenzhen Inovance Technology Co., Ltd.

www.inovance.com

Add.: Inovance Headquarters Tower, High-tech Industrial Park, Guanlan Street, Longhua New District, Shenzhen Tel: (0755) 2979 9595 Fax: (0755) 2961 9897

#### Suzhou Inovance Technology Co., Ltd.

www.inovance.com

 
 Add.:
 No. 16 Youxiang Road, Yuexi Town, Wuzhong District, Suzhou 215104, P.R. China

 Tel:
 (0512) 6637 6666
 Fax: (0512) 6285 6720